



Ahrend Qabin CHAT

This Manual will help you build the perfect solution for a comfortable conversation...

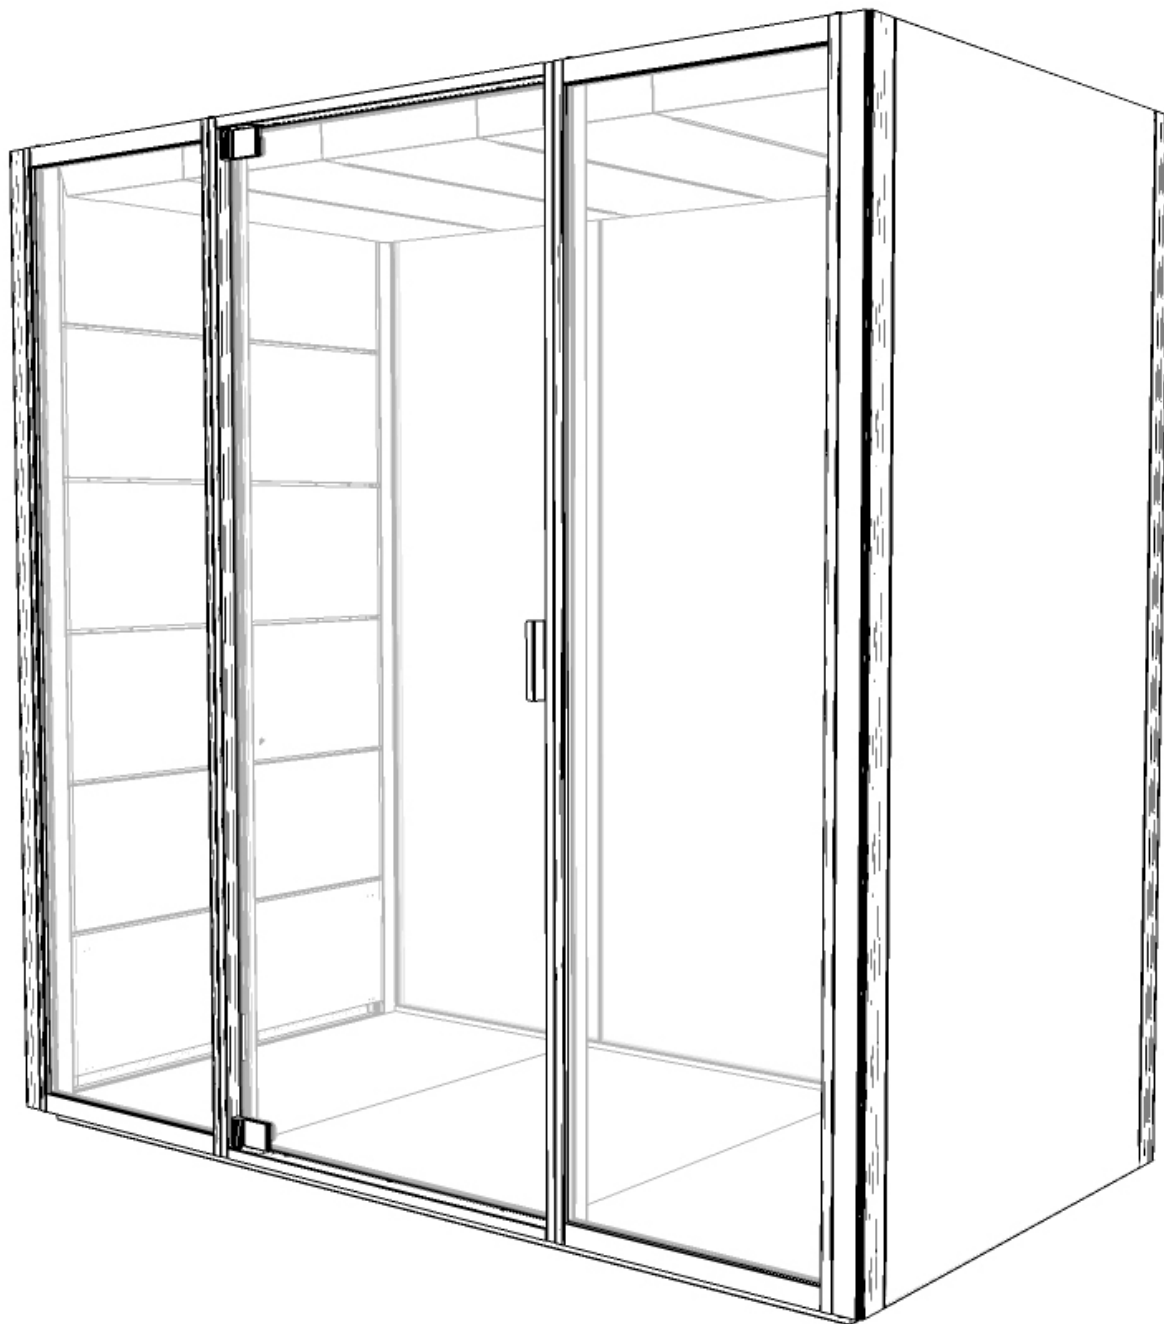

Ahrend Qabin CHAT


Package contents

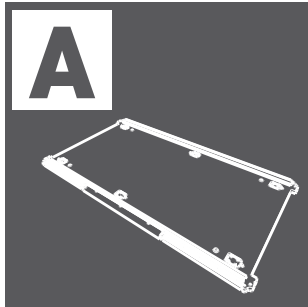

Floor x 1




Right wall x 1

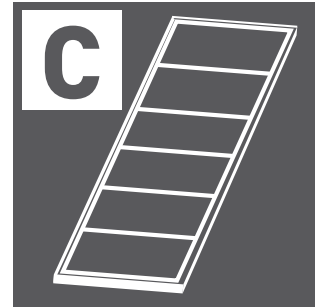


Left wall x 1



Ceiling x 1

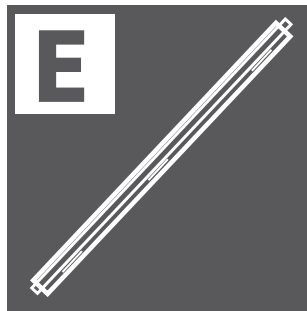


Column R x 1

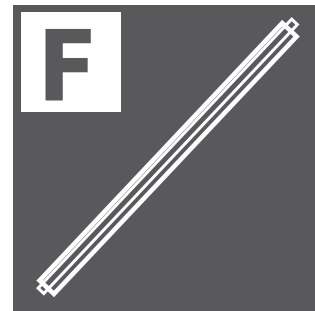

Column L x 1




Fan x 2

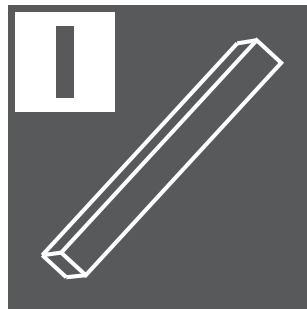


Components x 2



Hardware bag x 1

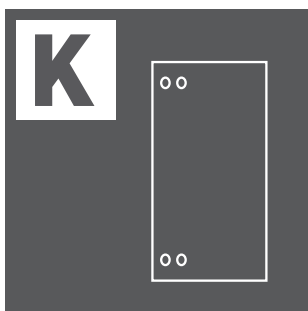

Glass door x 1

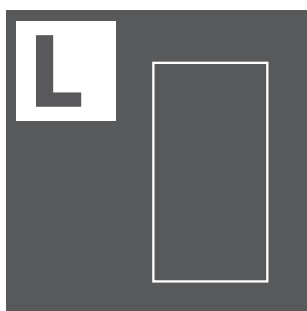

Windows glass x 3




Front glass x 2

Ahrend Qabin CHAT


Tools needed




Powertool

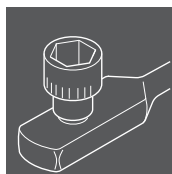

Socket wrench SW10

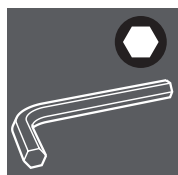


Hexagon SW8

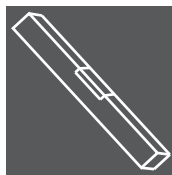


Levelling instrument




Ratchet wrench M10

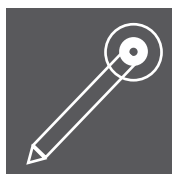

Rolling tool

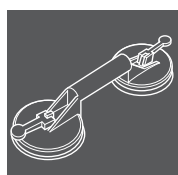

Glass carrier x 2

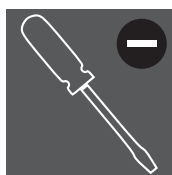

Flat head screwdriver



Glass cleaner



Rubber hammer


Place & adjust the floor

Confirm placement and make sure the floor is perfectly level



Tools needed



Flat head screwdriver

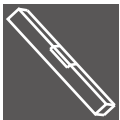


Levelling instrument

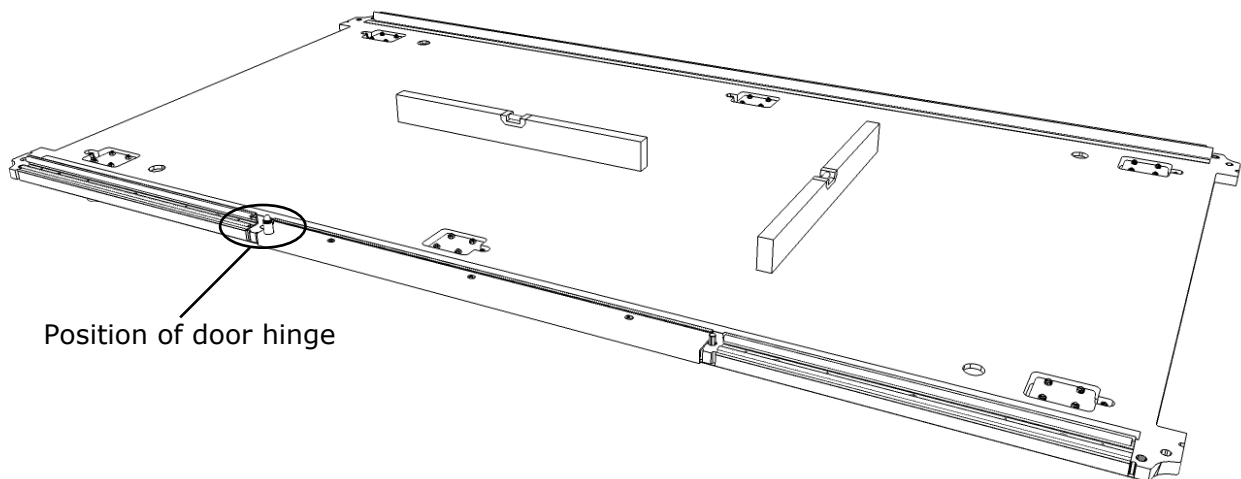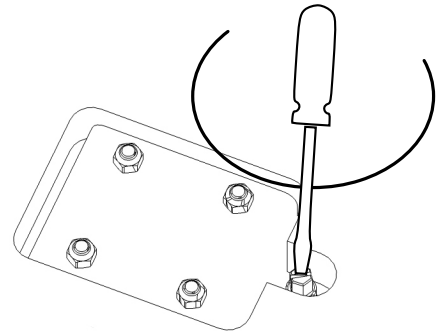


Position of door hinge

Make the floor level

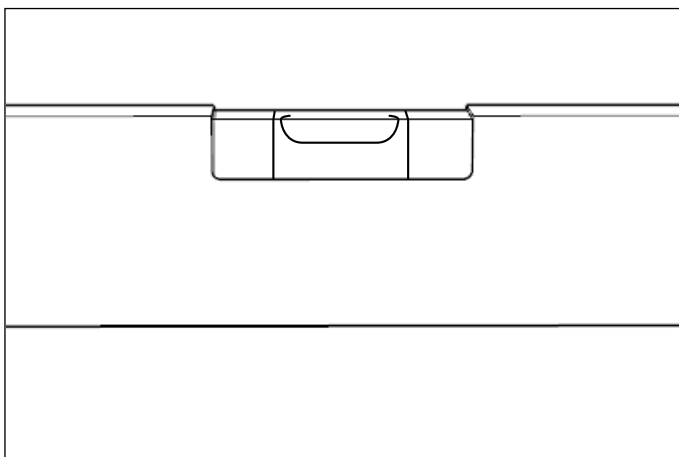

Use a flat head screwdriver to make sure the wheels are off the floor

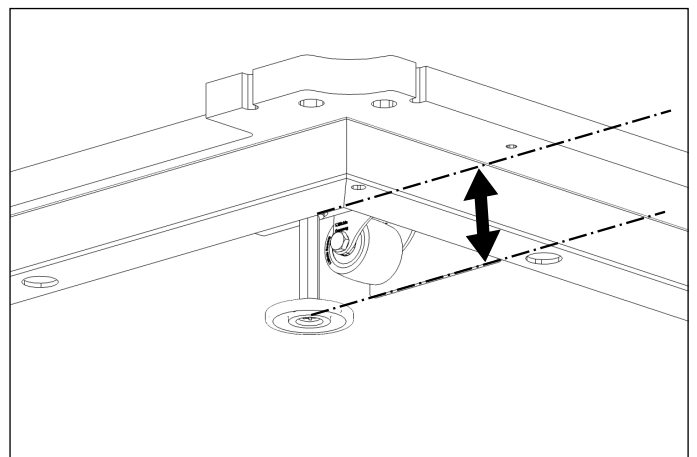

Place the left wall frame on the floor



Pay attention to front and back direction of the aluminum profiles

Tools needed




Ratchet wrench M10


Remove all fabric panels to reduce the weight of the wall

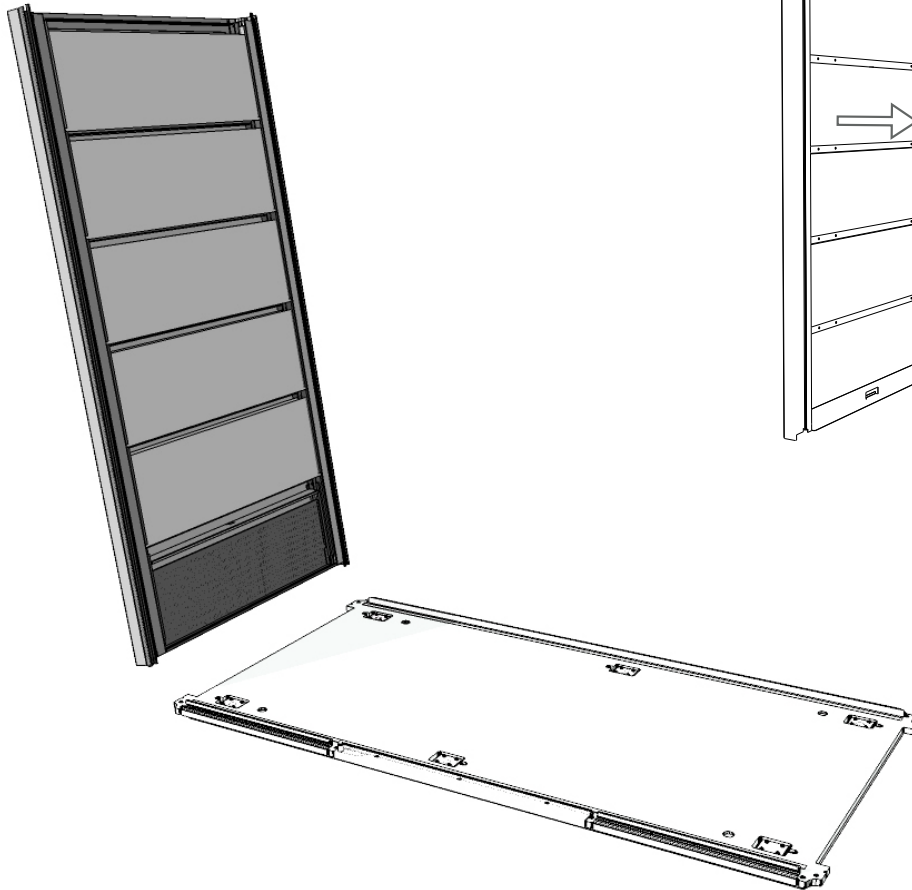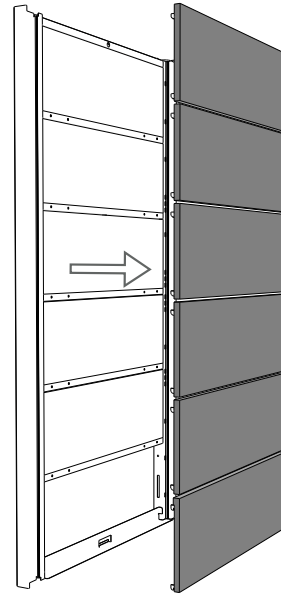

Insert the left panel in the correct position

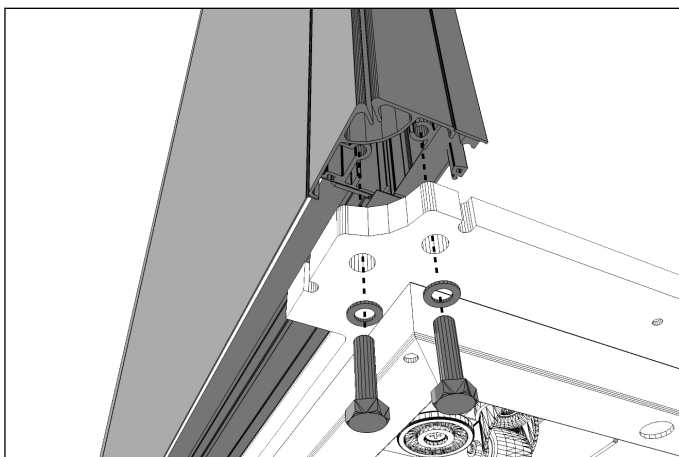

Use ratchet wrench to fasten 4 x PCS M10 hex screw

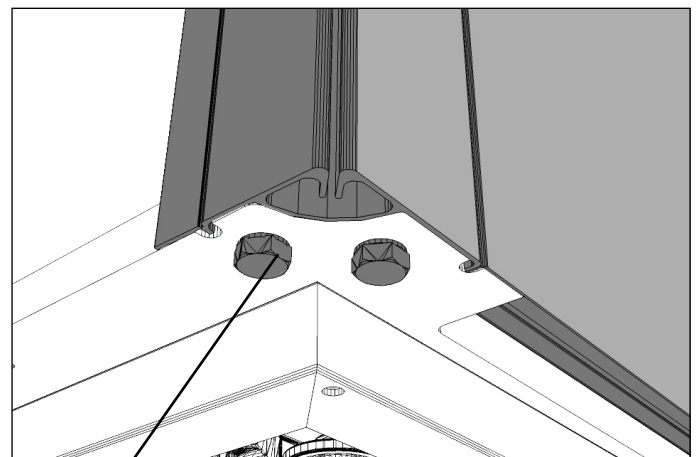

Ratchet wrench M10

Place the right wall frame on the floor



Pay attention to front and back direction of the aluminum profiles

Tools needed




Ratchet wrench M10


Remove all fabric panels to reduce the weight of the wall

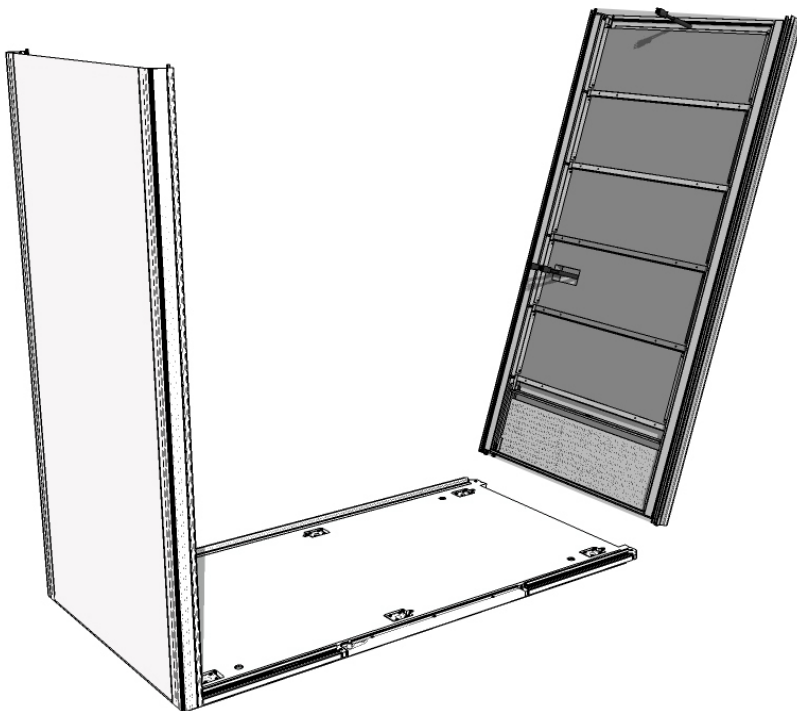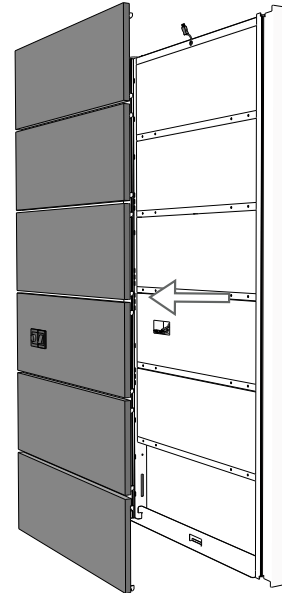

Insert the left panel in the correct position

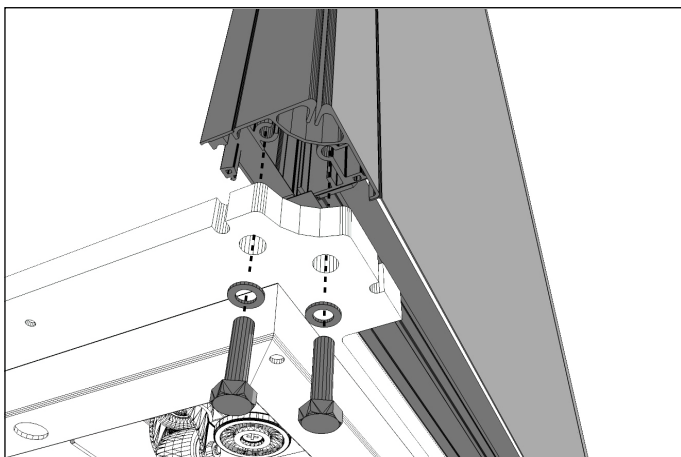

Use ratchet wrench to fasten 4 x PCS M10 hex screw

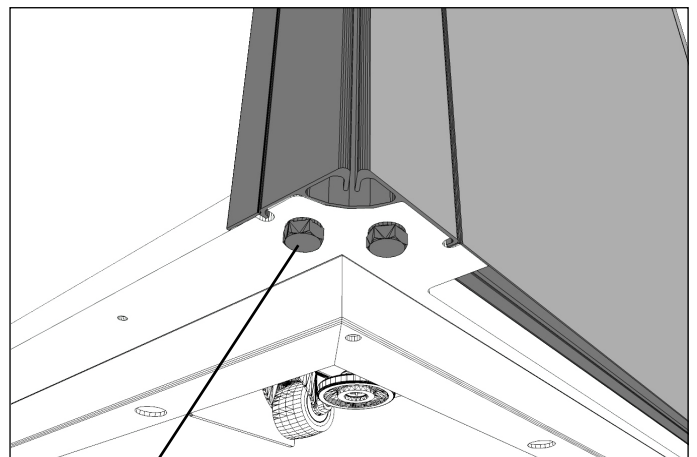

Ratchet wrench M10


Place door profiles

Pay attention to the left and right position of the door profiles


Tools needed




Ratchet wrench M10

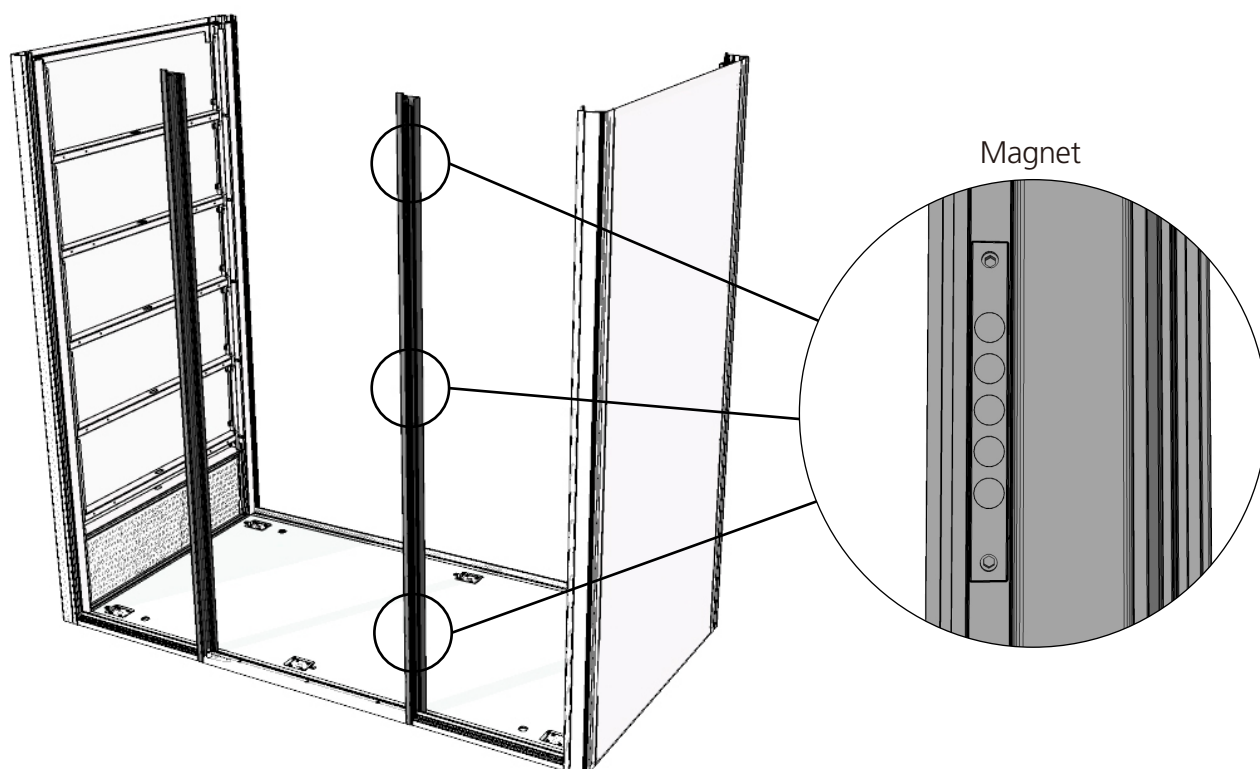

Insert the door profiles in the correct position

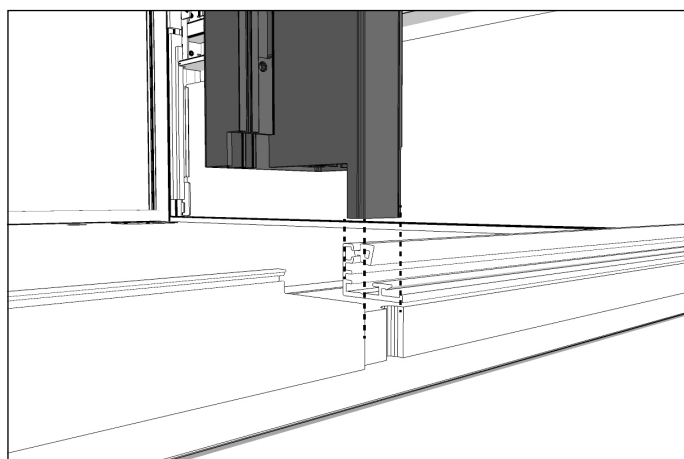

Use a ratchet wrench to fasten 2 x PCS M10 hex screw

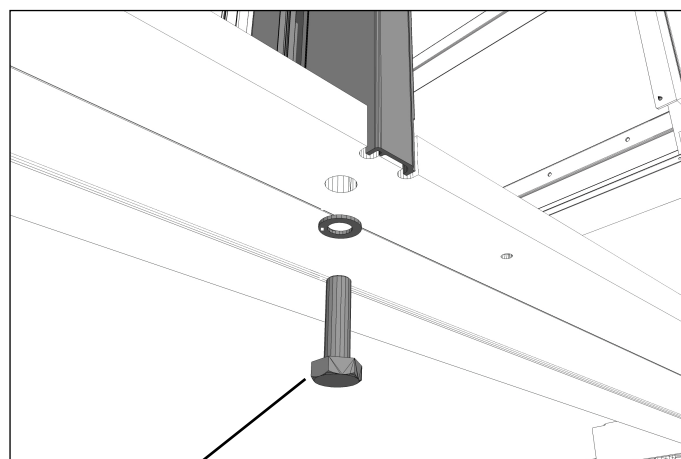


Ratchet wrench M10


Place the ceiling on the box

Pay attention to the front and back direction


Tools needed

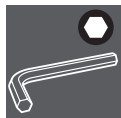



Hexagon SW8

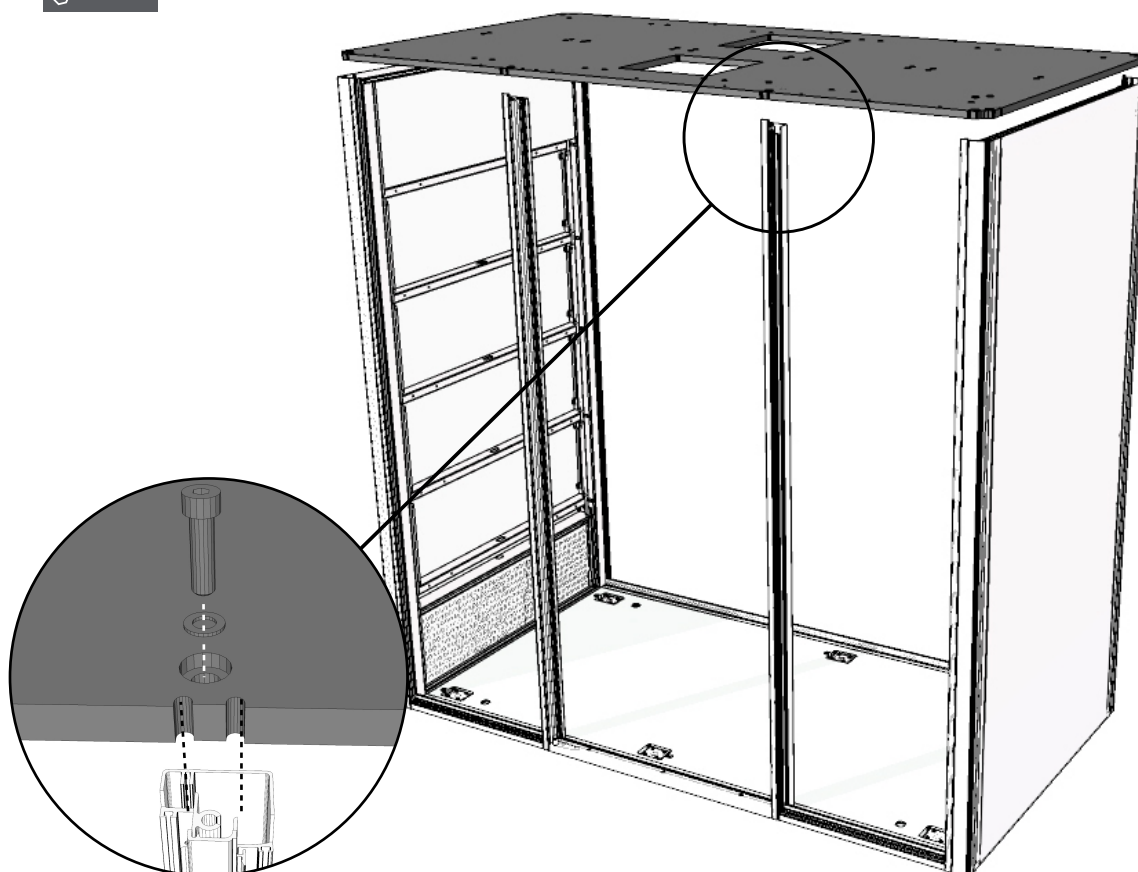

Insert the ceiling in the correct position

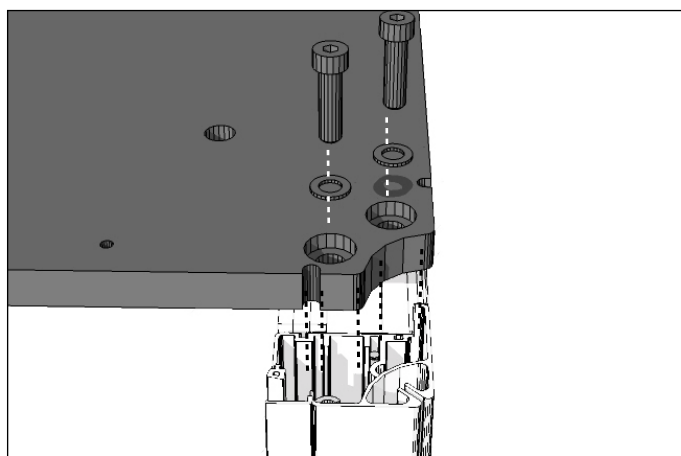


Use a hexagon to fasten 10 x M10

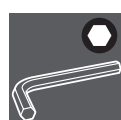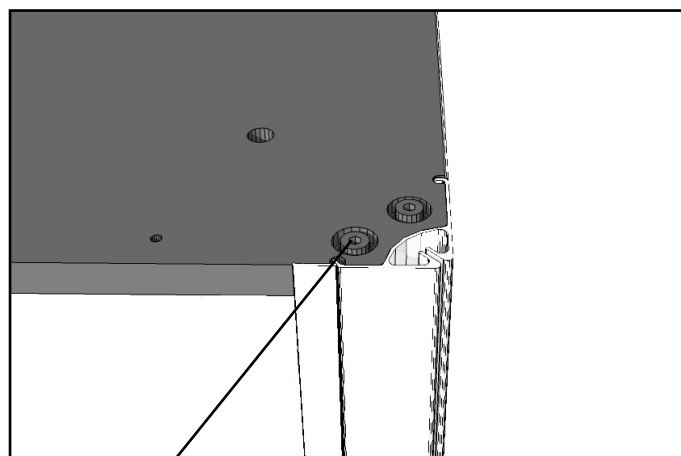

Hexagon SW8

Insert the fabric panel

Insert the fabric panel into the left wall frame

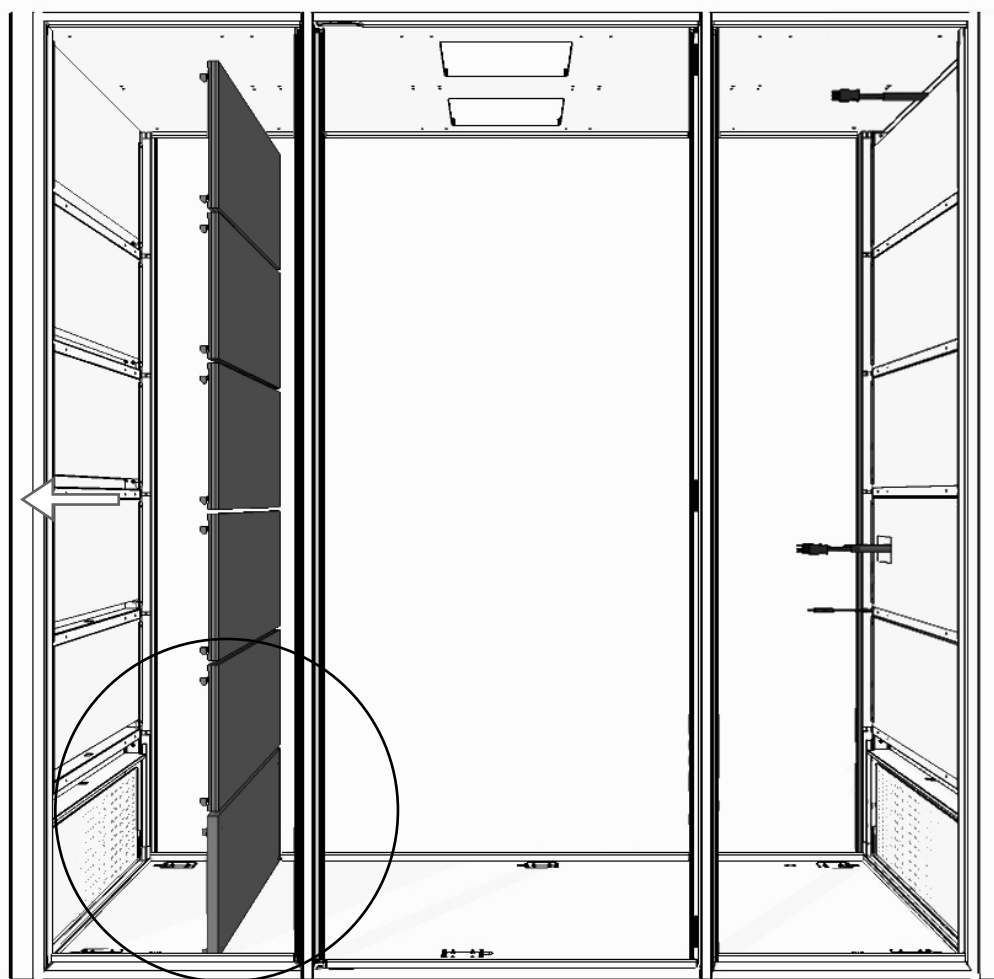

Pay attention to the bottom fabric panel
is different from other panels




— The other fabric panel


— The bottom fabric panel

Insert the fabric panel


Insert the fabric panel into the right wall frame

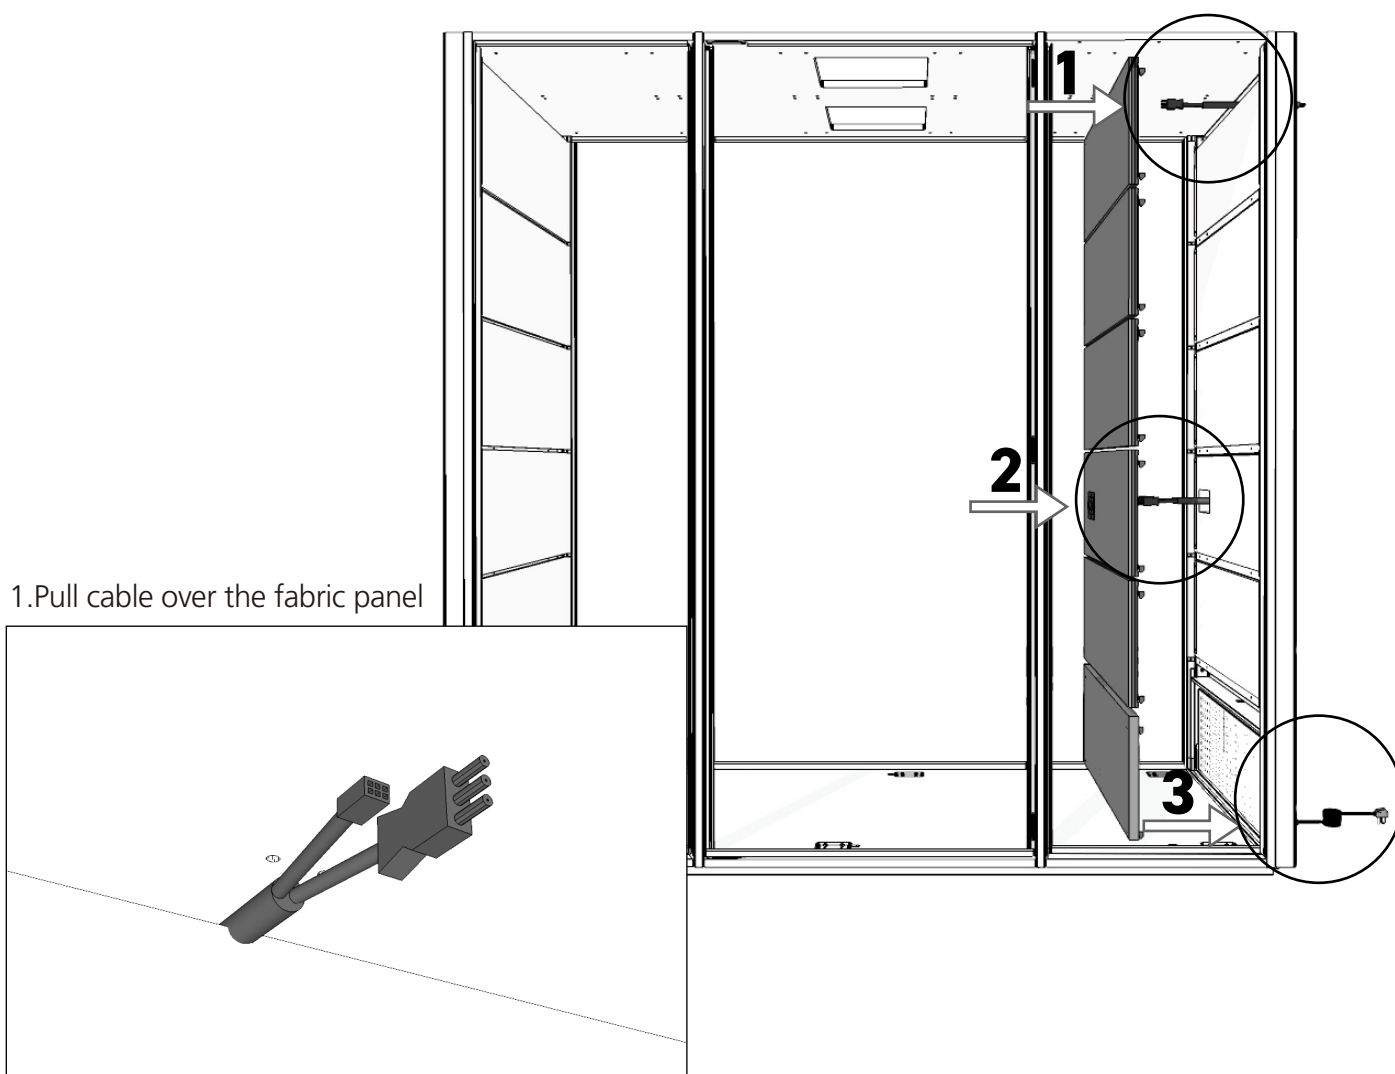

2. Connect cable with the switch

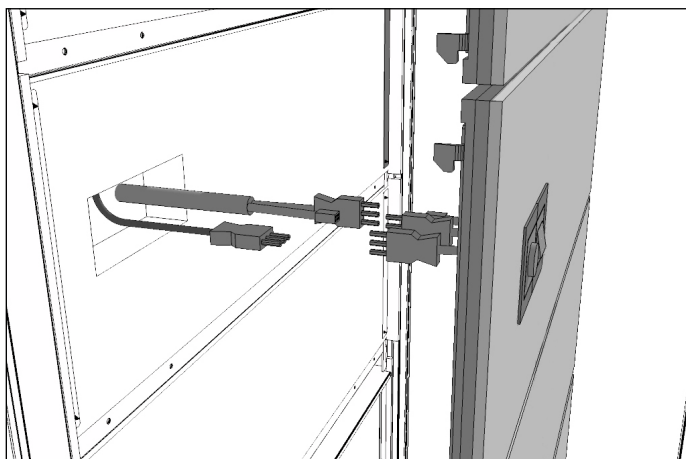


3. Connect the power plug

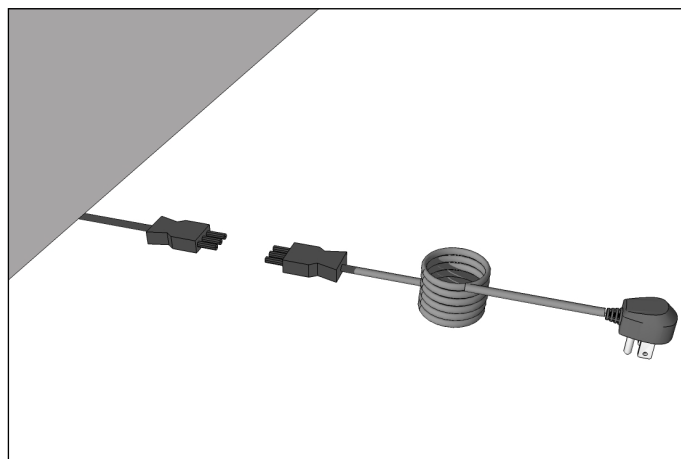


Install the panel under the top frame

Pay attention to the installation sequence and the cables in the panel


Tools needed

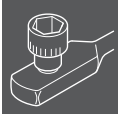


Socket wrench SW10

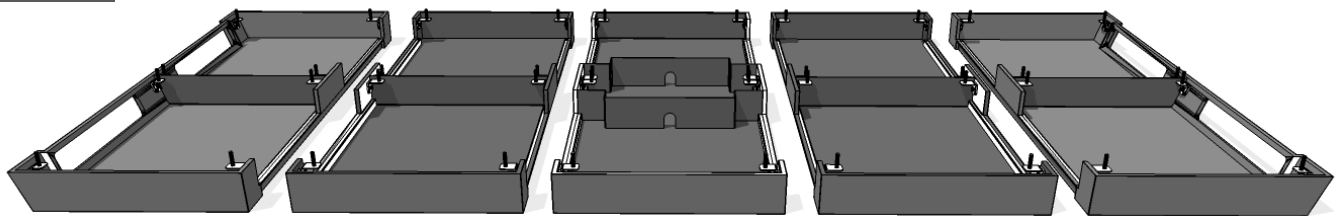



C1 **B1** **A** **B2** **C2**

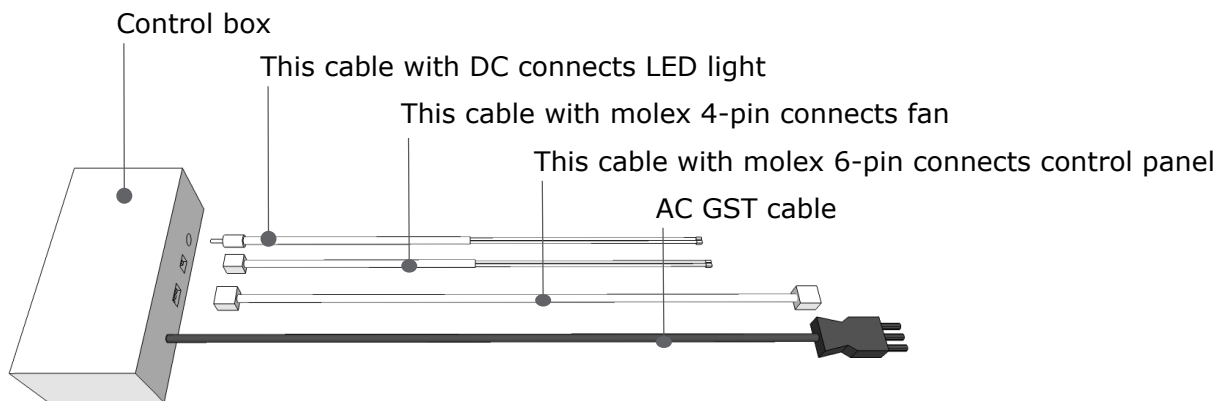

Put the control box and cable into panel A

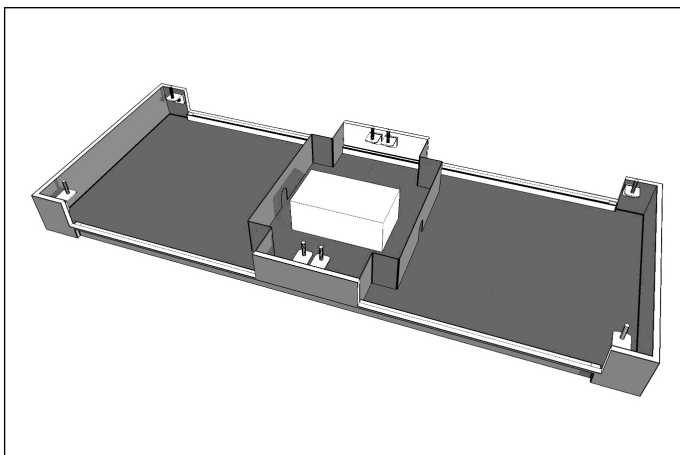

Push the panel A into the top frame and use a socket wrench to fix it with M6 nuts*8

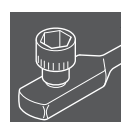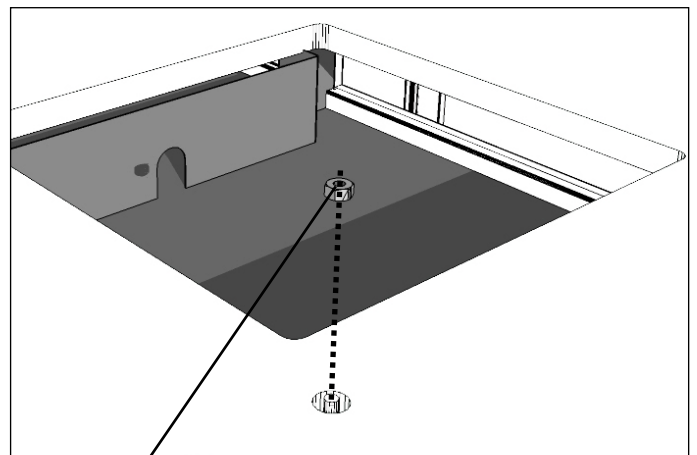


Socket wrench SW10

Install the panel under the top frame


Install panel B1 & B2 after installing panel A

Tools needed


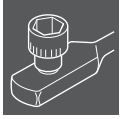


Socket wrench

Extend the AC cable and DC cable

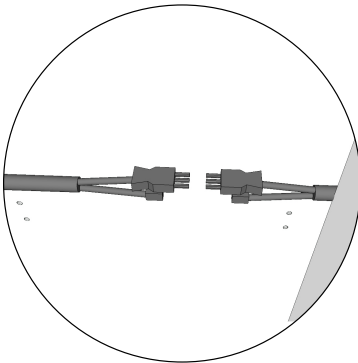



Extend the cable to connect the power supply and the lamps

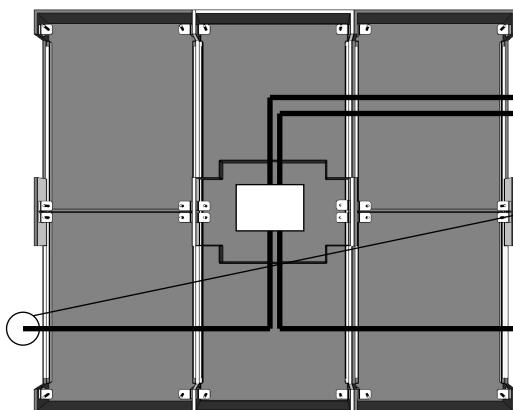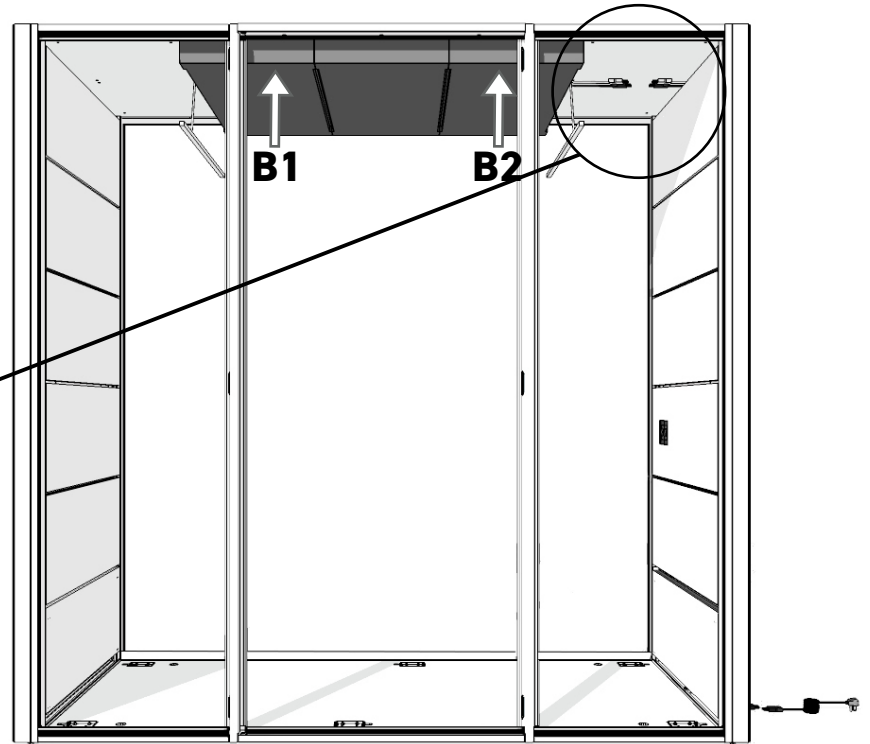

AC cable and DC cable


LED light cable

Use a socket wrench to fix panel B1, B2

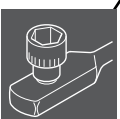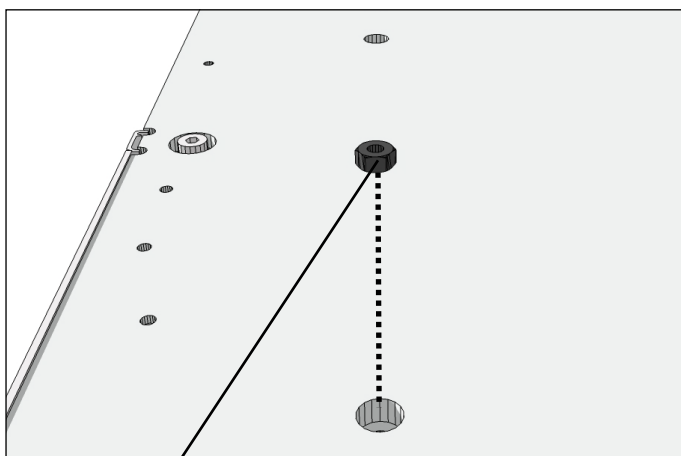

Socket wrench SW10


Connect cables to the lights

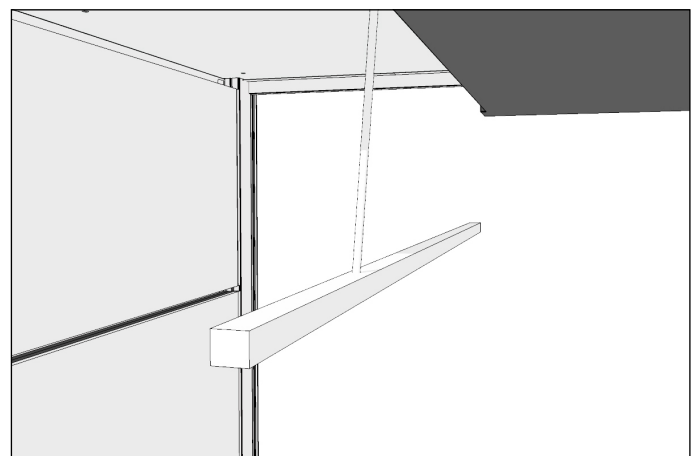


Install the panel under the top frame

Install panel C1 & B2 after installing panel B1 & B2
then use a socket wrench to fix panels C1 & C2.
Connect cables


Tools needed

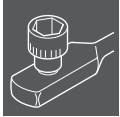


Socket wrench

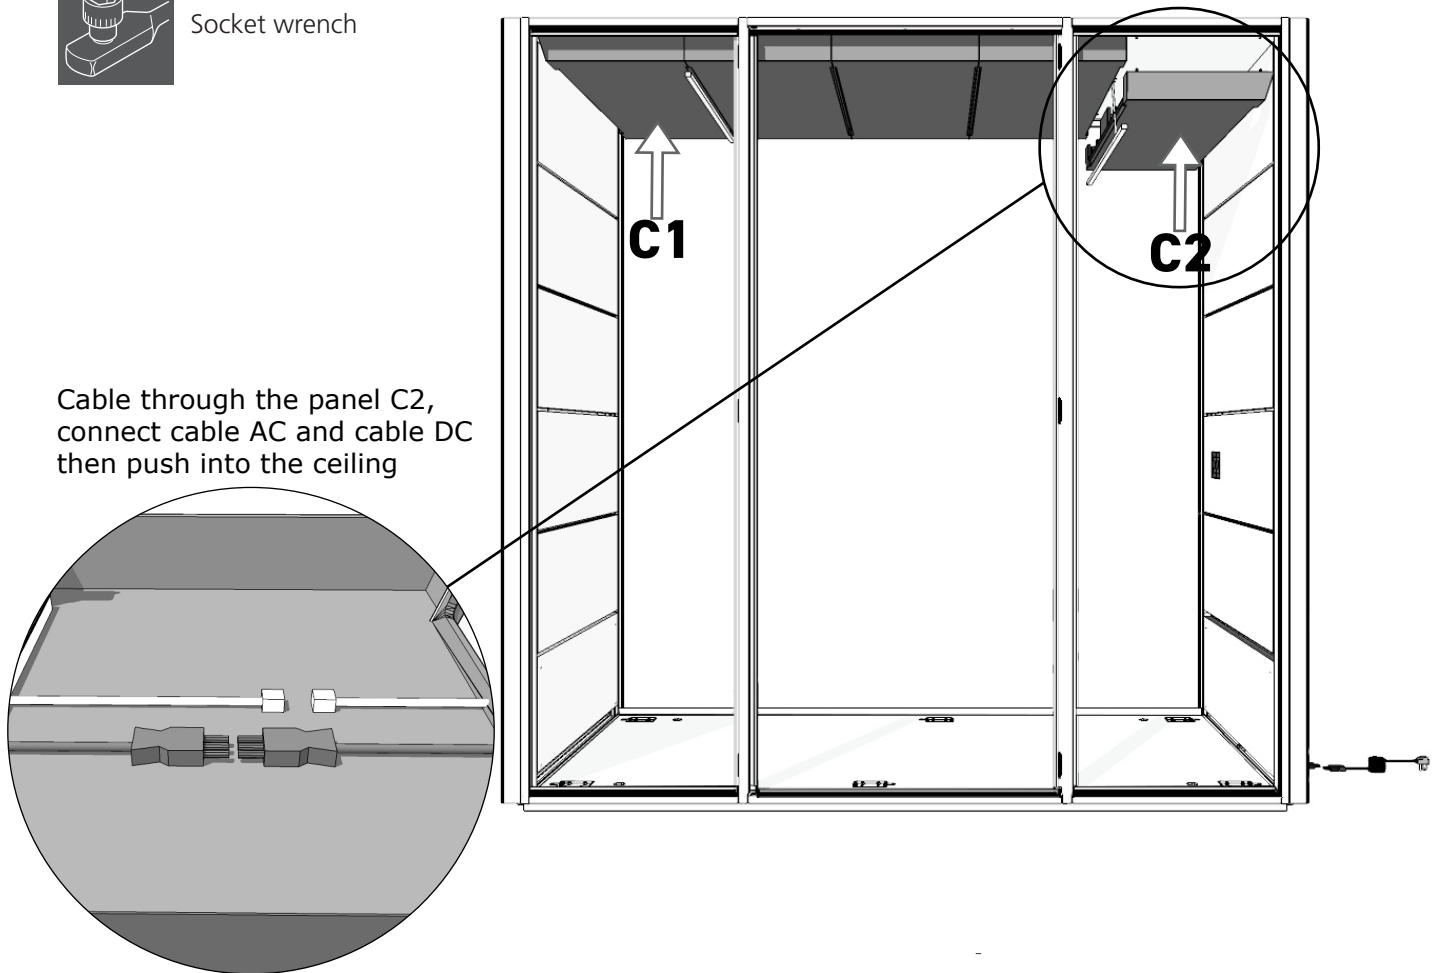


Fix the U-shaped clip and Embed lamps

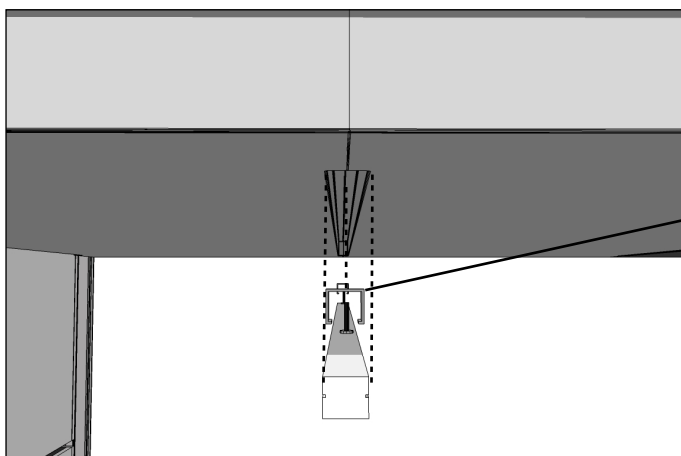


The U-shaped clip

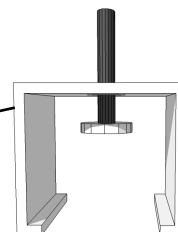


Install fans

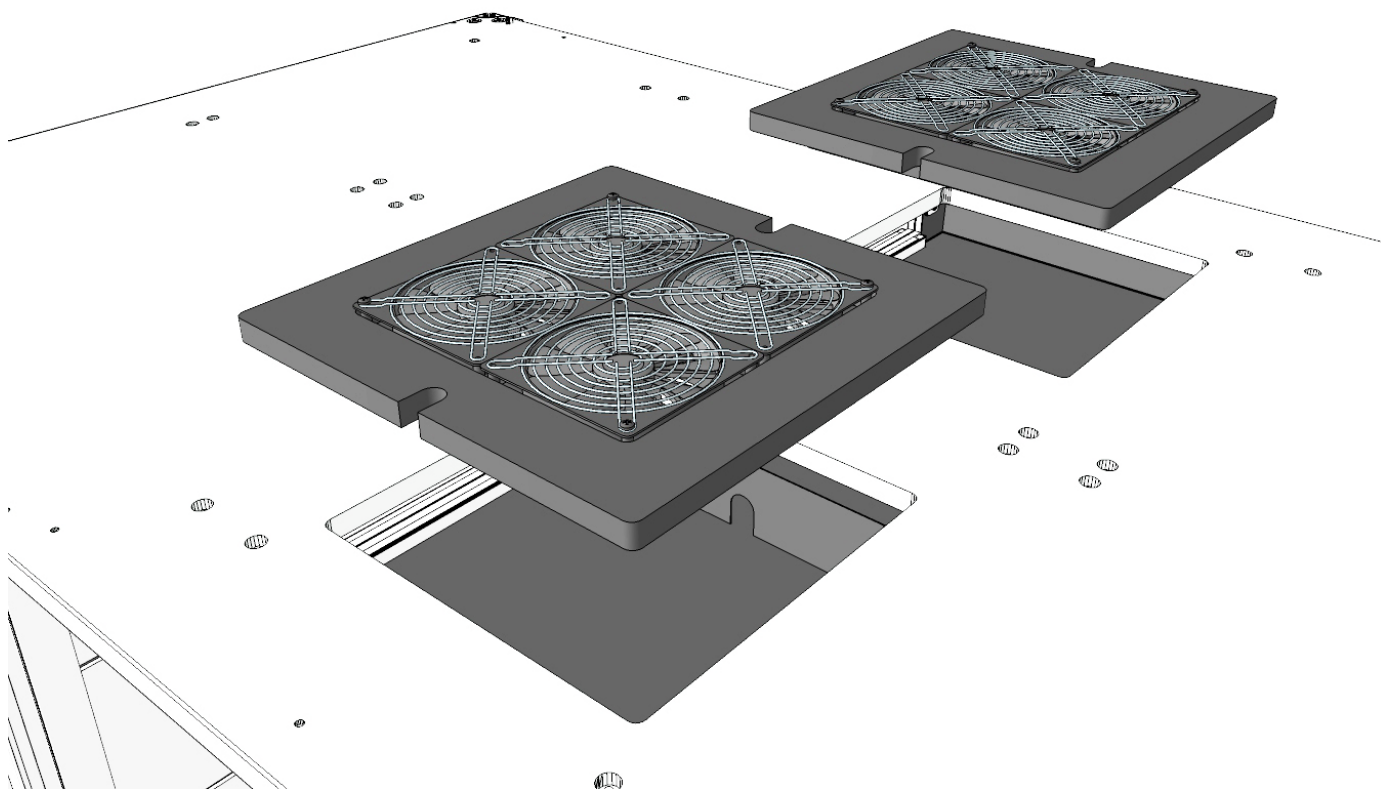

Connect cable

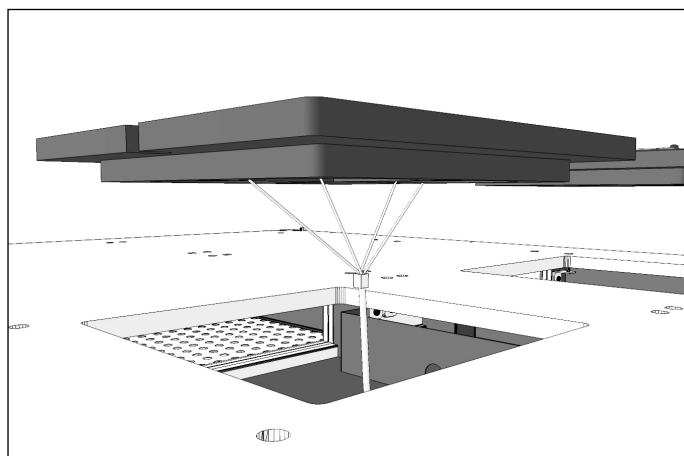

Install fans

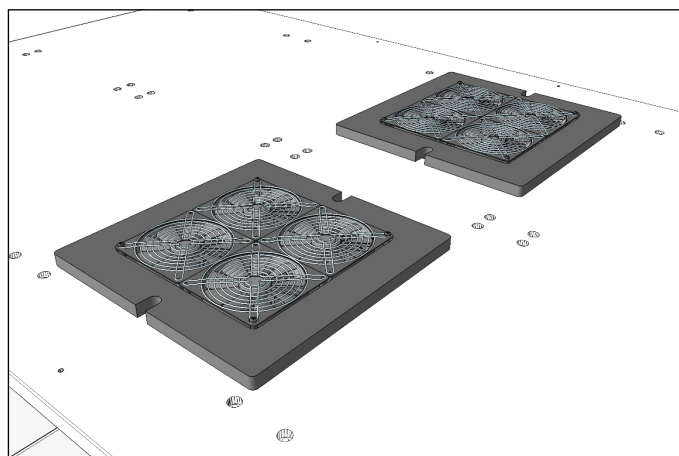


Place back side glass panels

It is important to take your time and tape the glass panels correctly


Tools needed




Glass carrier x 2

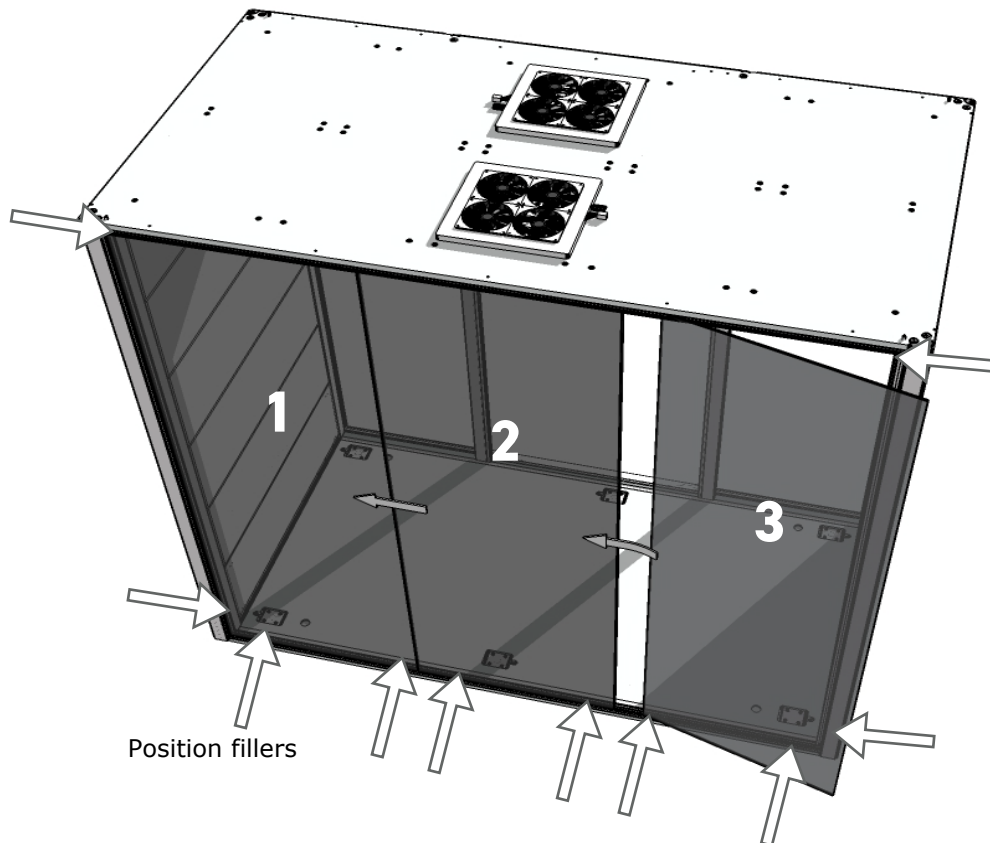

Place two fillers per glass panel

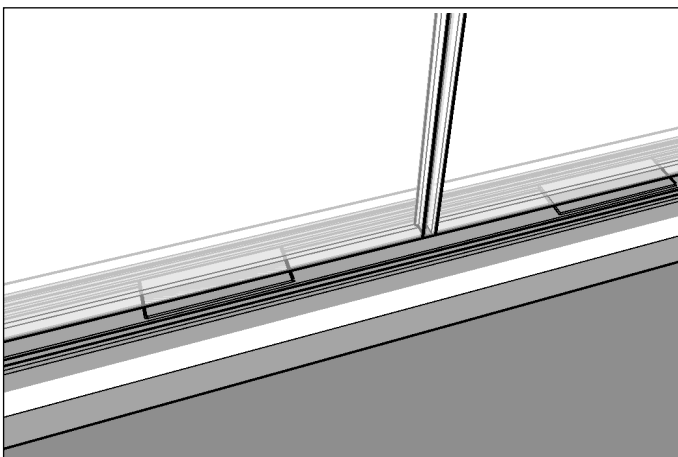

Make sure the fillers are horizontal

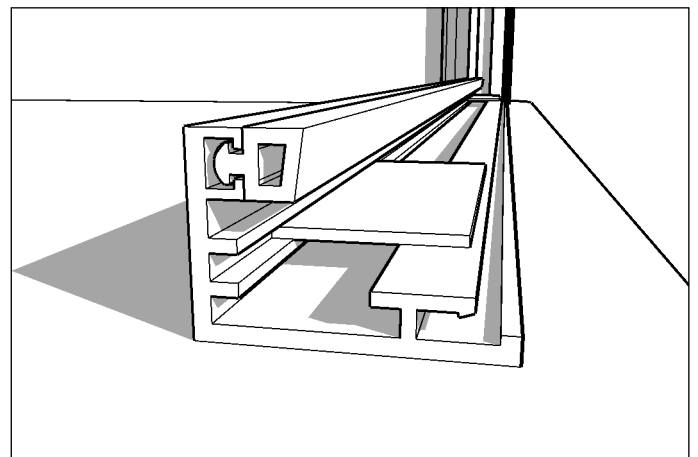


Place back side glass panels

It is important to take your time and tape the glass panels correctly


Tools needed




Glass carrier x 2

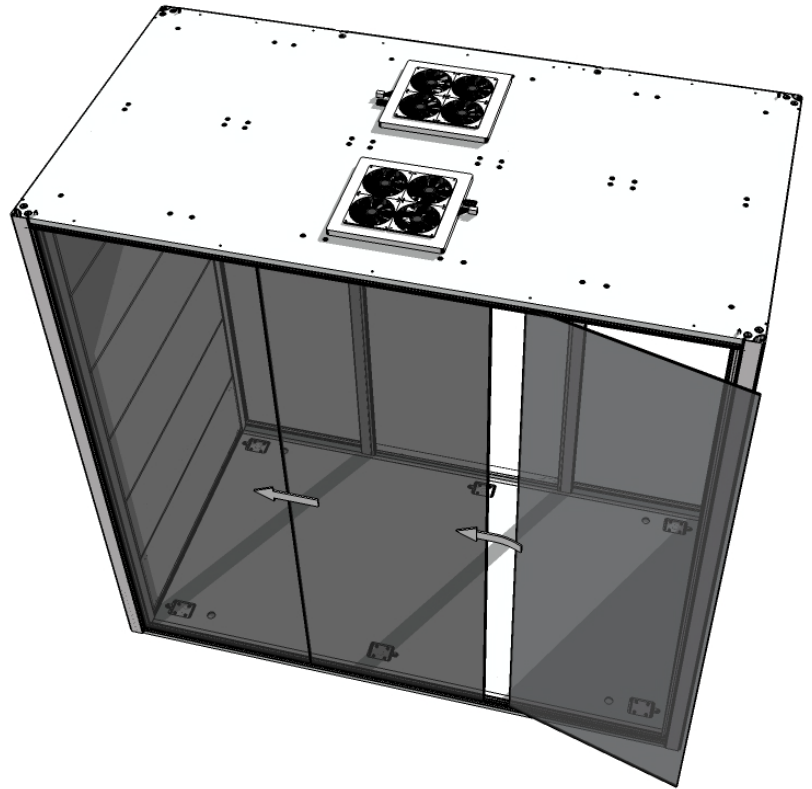


Place tape on panel 1 then install panel 2 and so forth

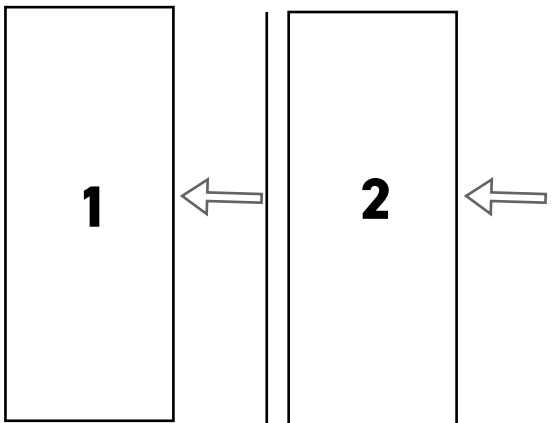

Install glass panel

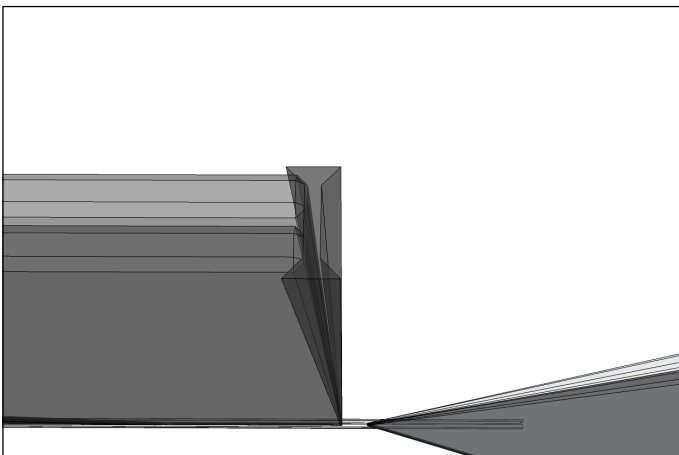

Keep panels straight while closing gap

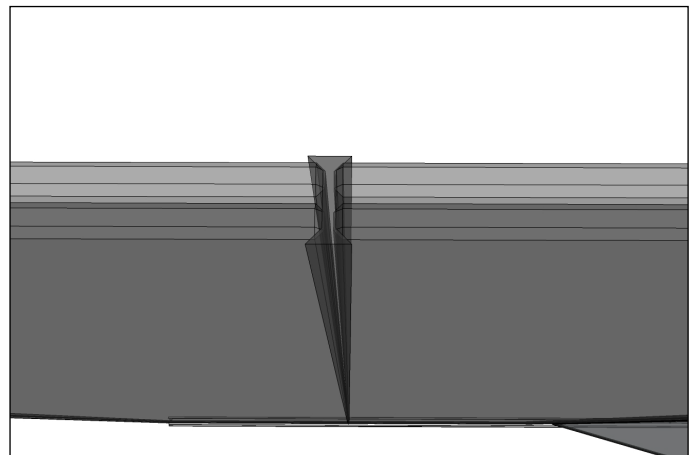


Positioning the glass panels

Ensure this step is done properly to guarantee a correct installation of the Qabin Chat


Tools needed



Glass carrier x 2

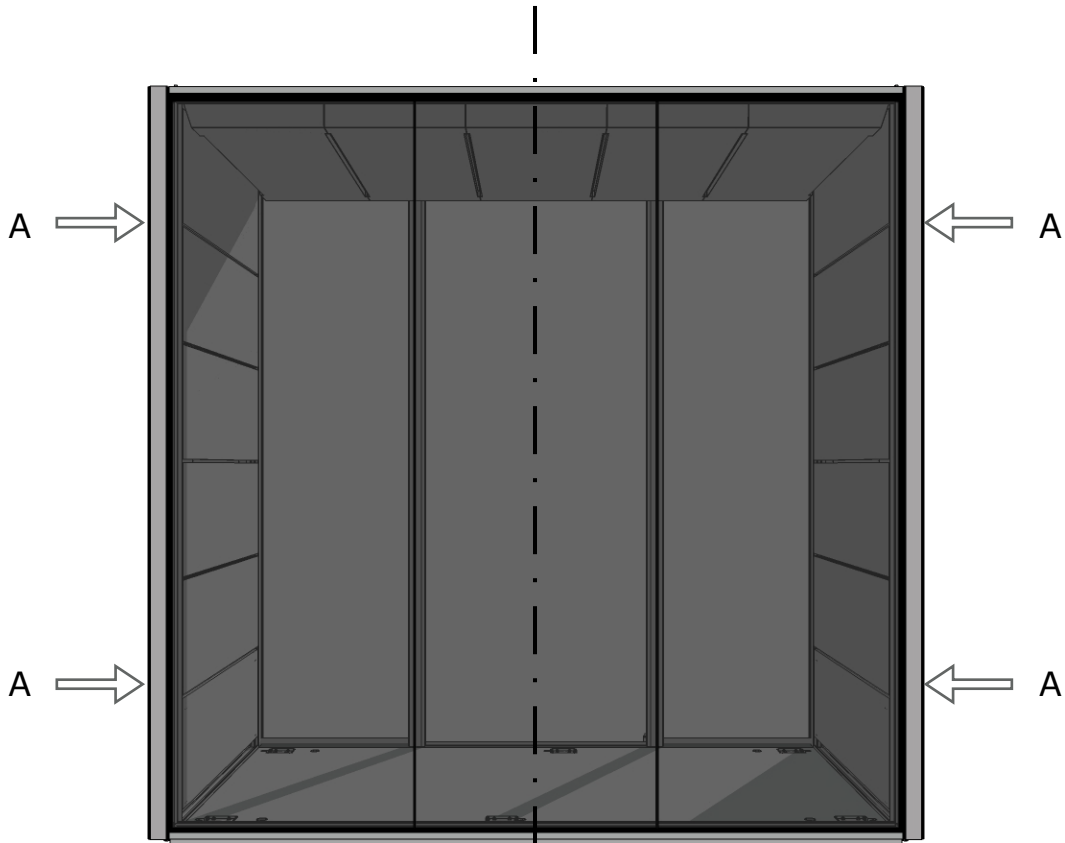

Place fillers at position A

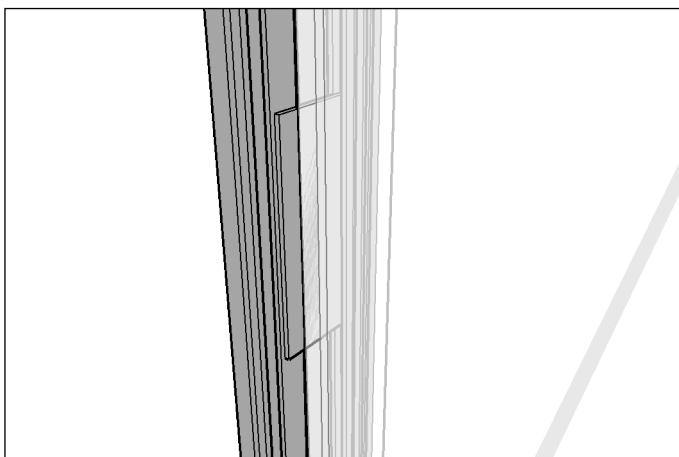

This is an important step!

It is important to place an equal amount of fillers on position A. An equal amount of fillers will make sure the box is perfectly vertical. It is also important to use the right amount or the right thickness of fillers to "lock" the 3 glass panels.

You are done, when the wall and glass panels are vertical and the glass cannot be moved to the left or right anymore

Secure glass with locking profile

After this step the glass panels are secure

Tools needed




Rolling tool




Glass cleaner



Rubber hammer

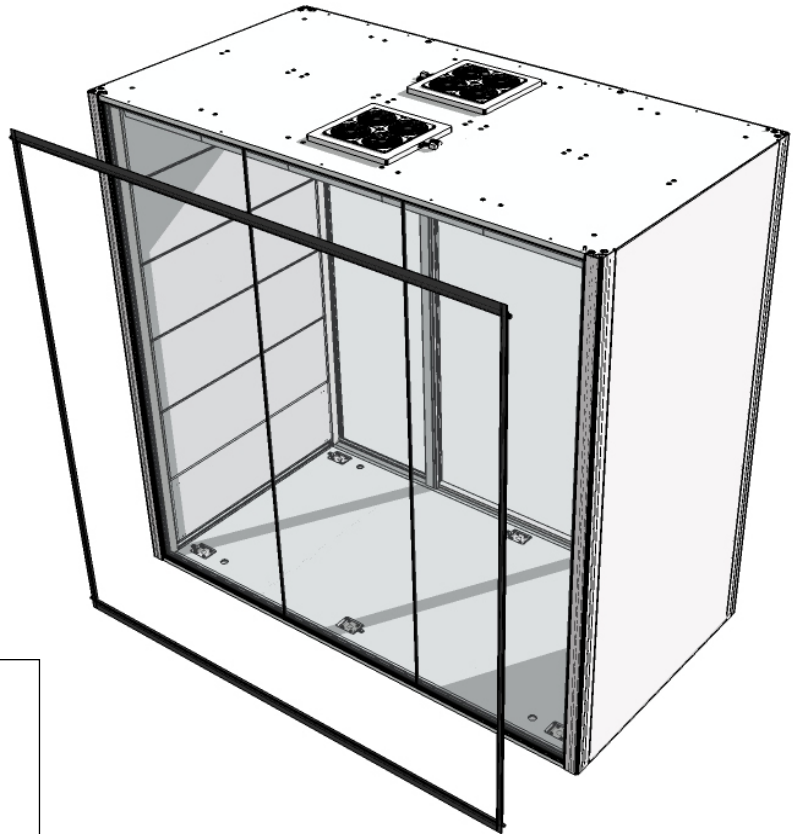


Click the profile in place

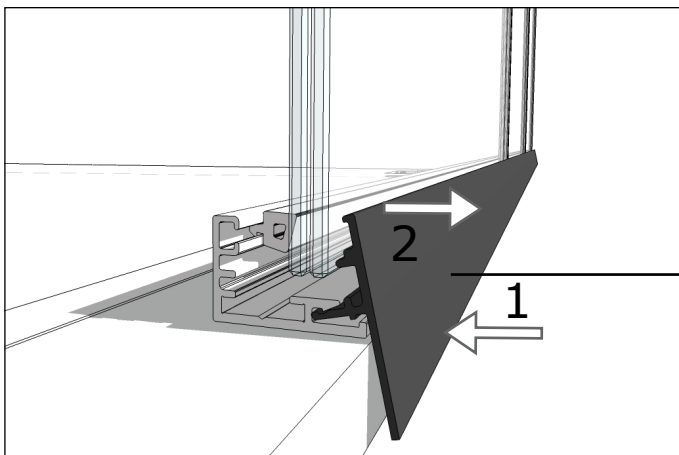

Rubber hammer

Use a rolling tool to push the rubber between glass and profile (Please pay attention to the direction of the rubber)

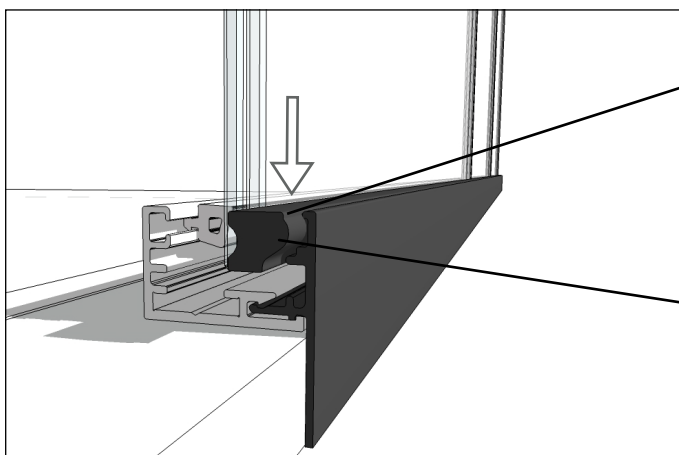

Rolling tool

Use glass cleaner on glass for easy installation




Place glass panels front side

Glass panels are the same size. Move the glass panels from the corners towards the door. They need to slide inside the door profile


Tools needed




Glass carrier x 2

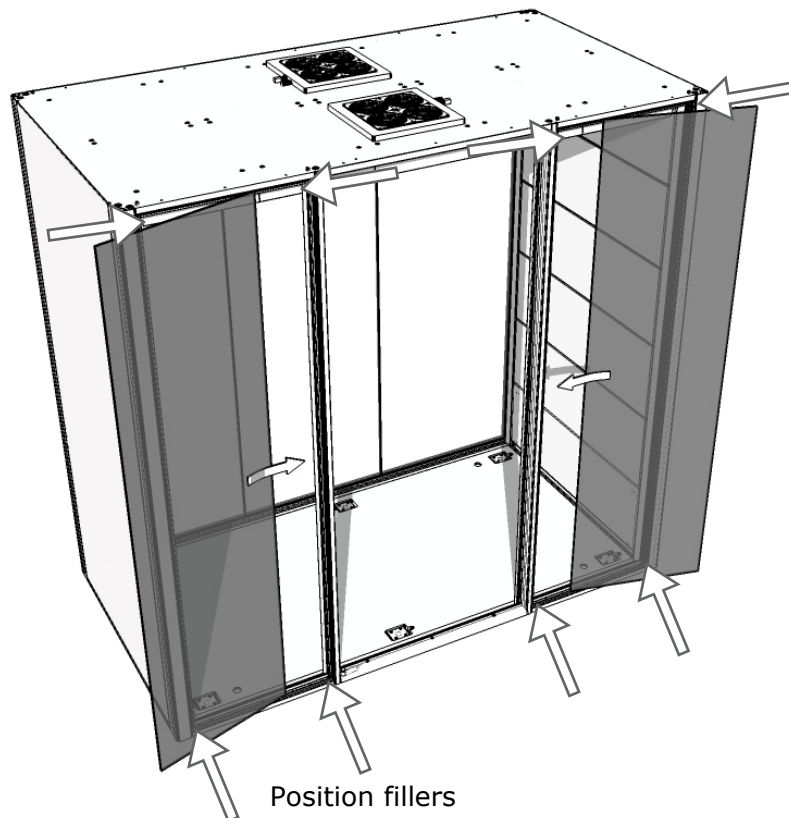

Place fillers per glass panel

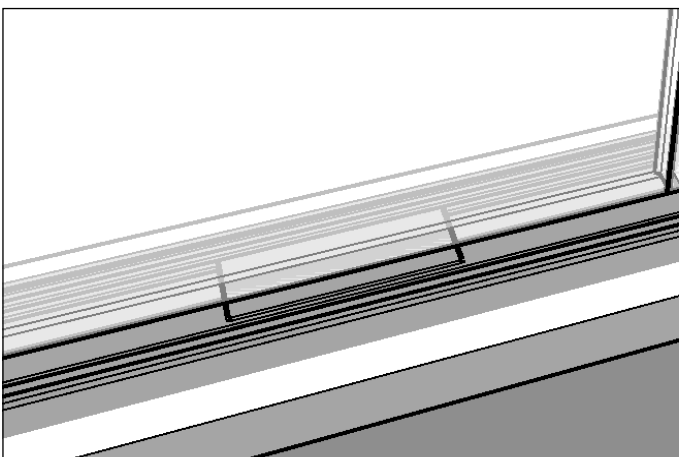

Make sure the fillers are horizontal

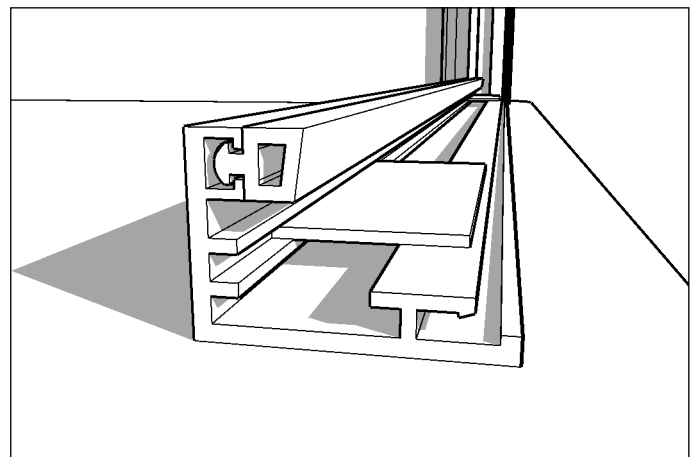


Positioning the glass panels

Ensure this step is done properly to guarantee a correct installation of the Qabin Chat


Tools needed



Glass carrier x 2

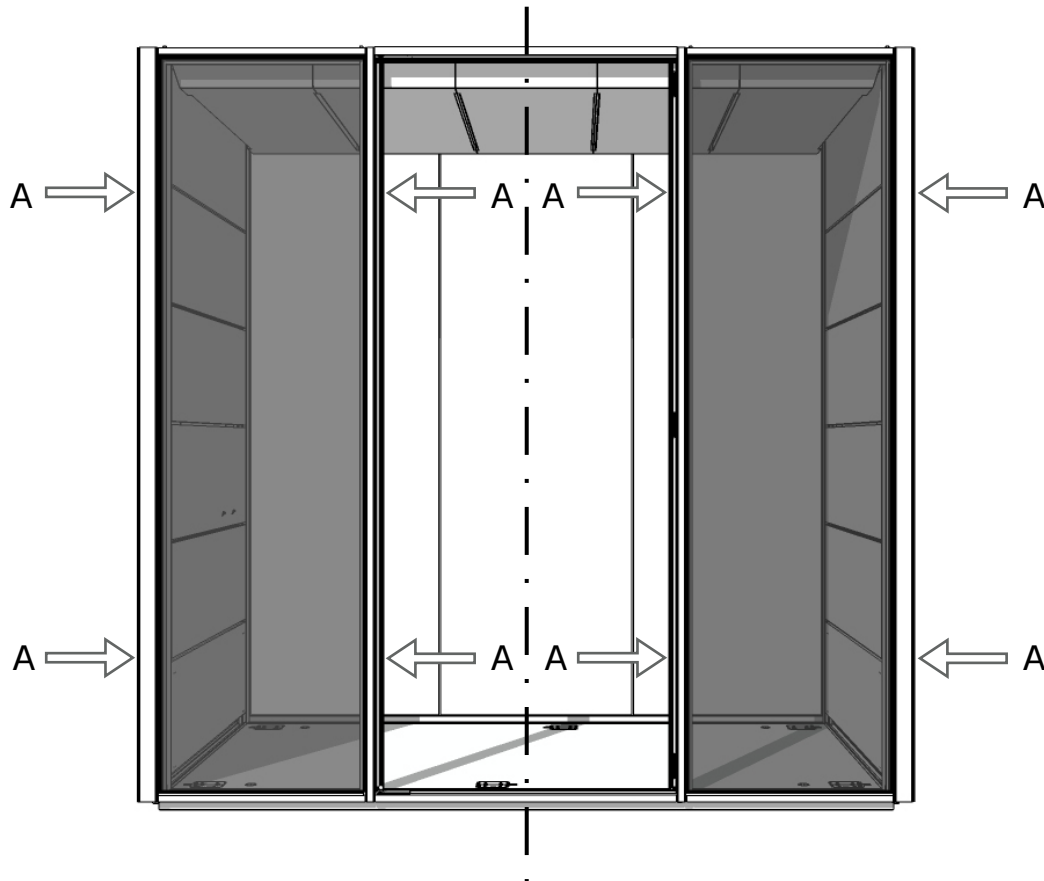

Place fillers at position A
(between glass and frame)

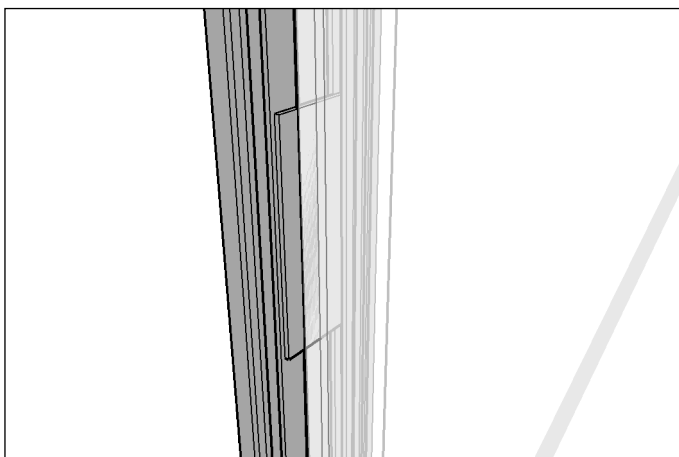

This is an important step!

It is important to place an equal amount of fillers on position A. An equal amount of fillers will make sure the box is perfectly vertical. It is also important to use the right amount or the right thickness of fillers to "lock" the right and left glass.

You are done, when the wall and glass panels are vertical and the glass cannot be moved to the left or right anymore

Secure glass with locking profile

After this step the glass panels are secure

Tools needed




Rolling tool




Glass cleaner



Rubber hammer


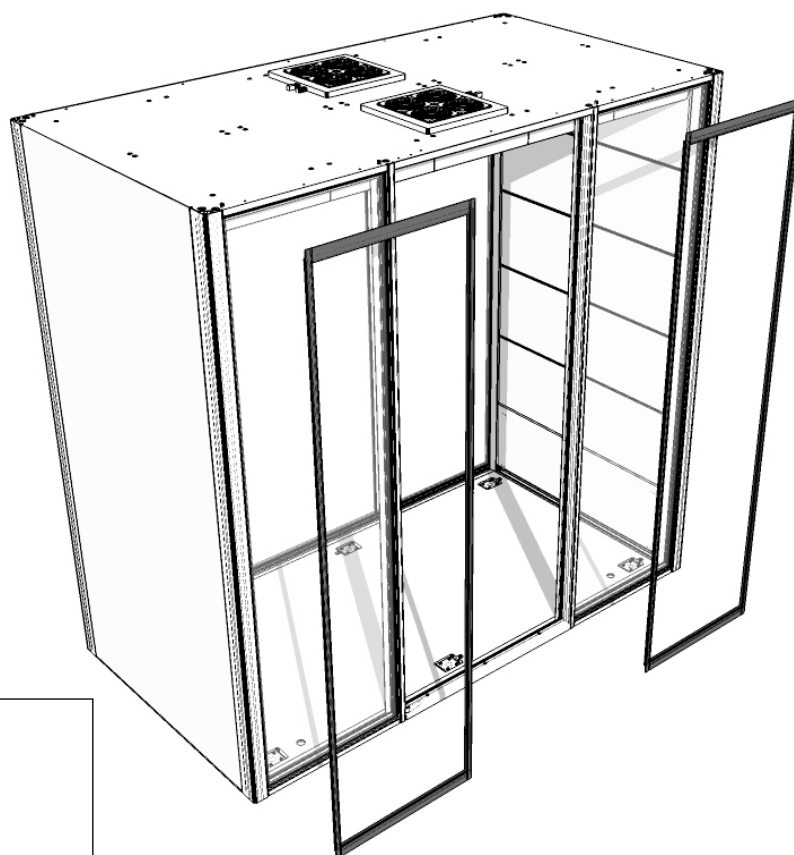


Click the profile in place

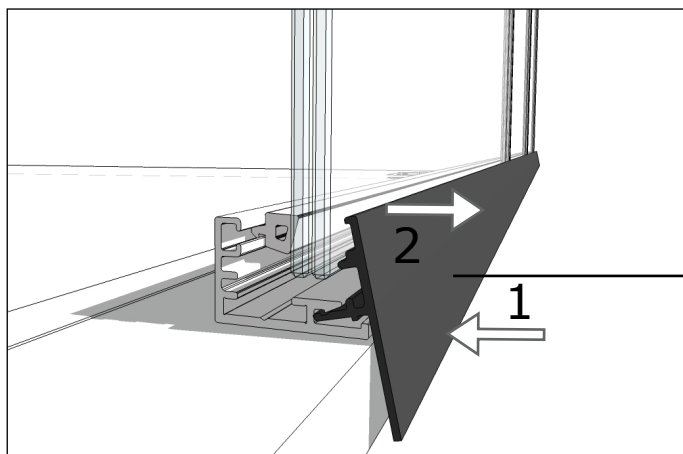

Rubber hammer

Use a rolling tool to push the rubber between glass and profile (Please pay attention to the direction of the rubber)

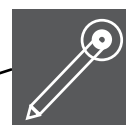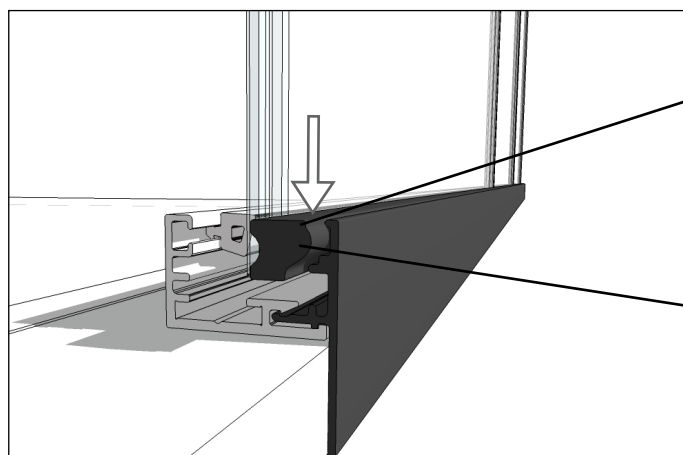

Rolling tool

Use glass cleaner on glass for easy installation



Place the door on the bottom hinge pin

Test the bottom hinge height without the glass first, the gap should be around 2-3mm from the floor. Ensure the hinge is aligned with the bottom of the glass before tightening the screws.


Tools needed




Powertool




Glass carrier

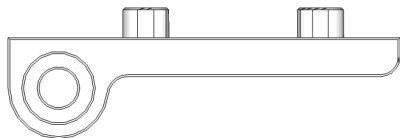


The top hinge

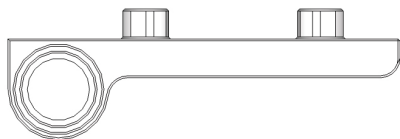


The bottom hinge

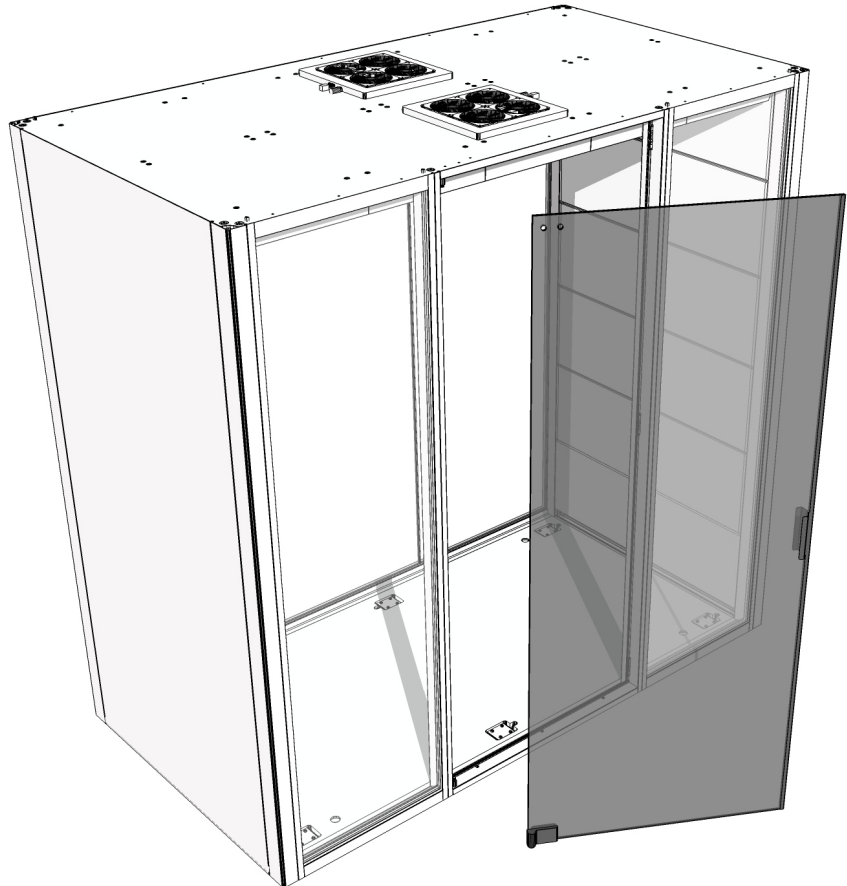

Ensure the hinge pin has enough washers to set the hinge at correct height

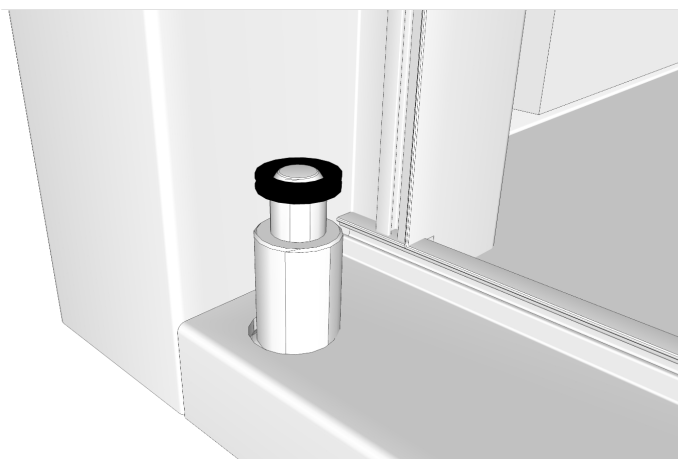

Install the bottom hinge to the glass first

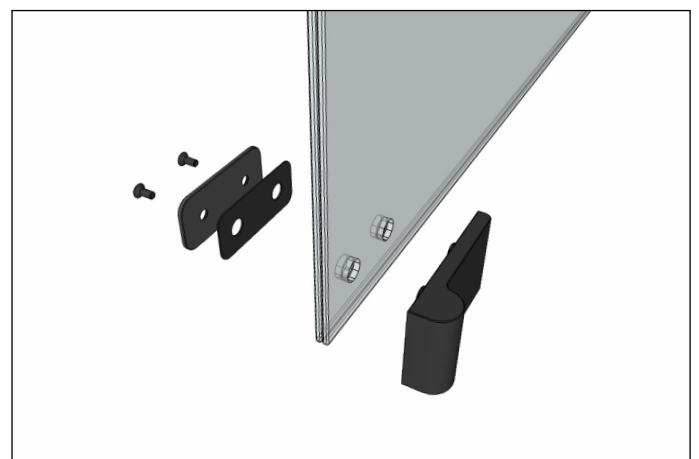

Assemble the top hinge to the glass

Check if the glass door is vertical. If not, then loosen screws, re-align and try again.


Tools needed




Powertool



Glass carrier

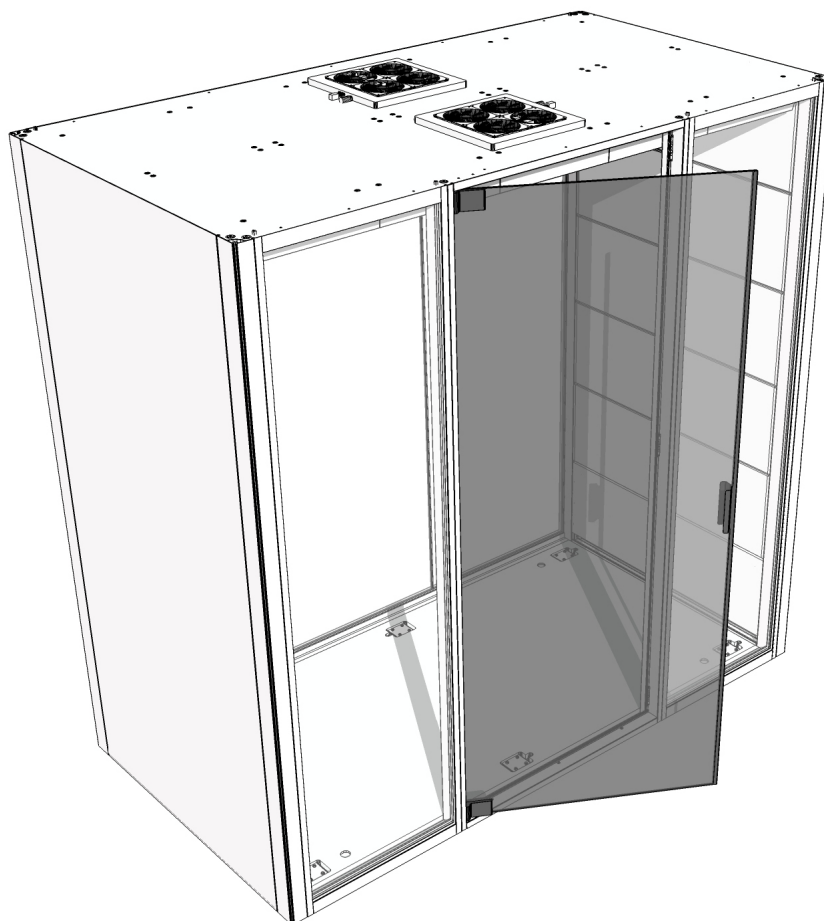



Connect the hinge at the bottom of the door

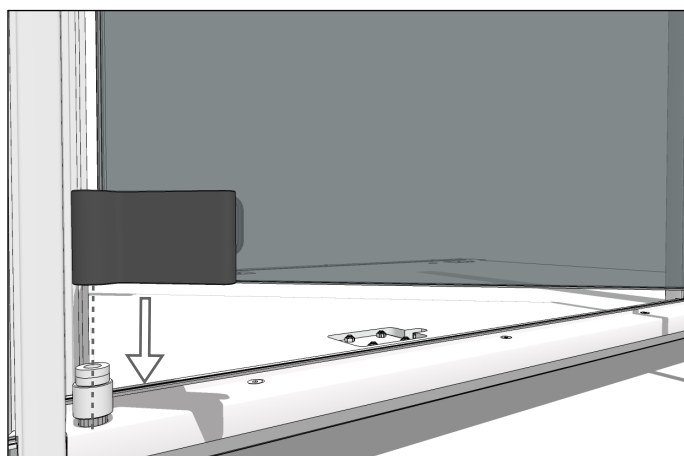


Install the top hinge to the glass while you connect the top hinge




Install the floor filler plate + carpet assembly

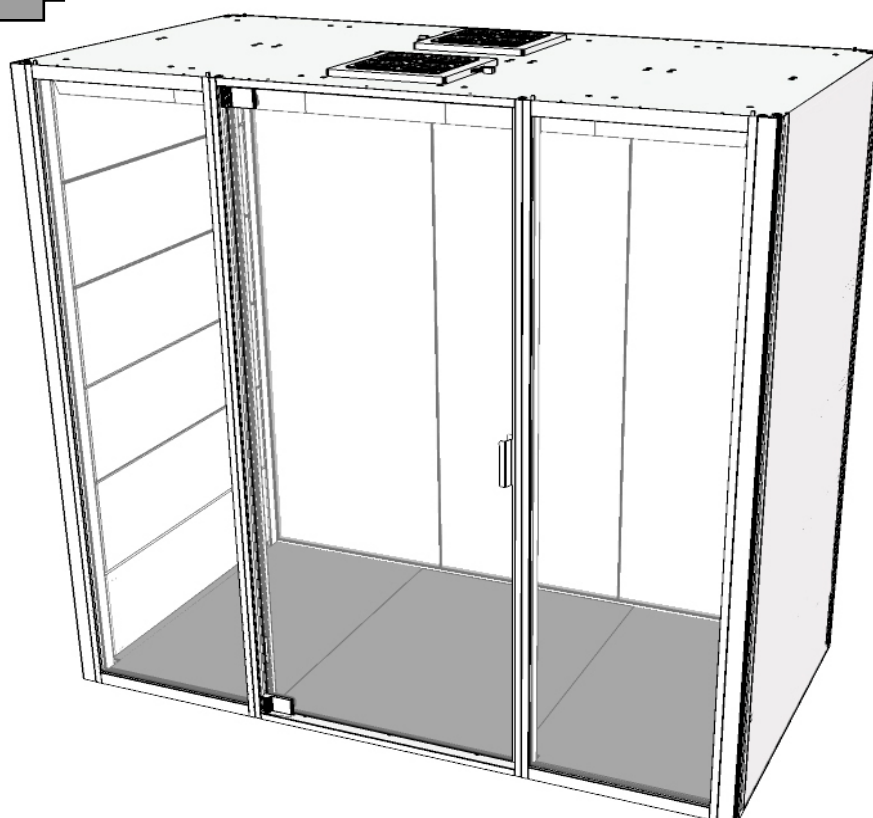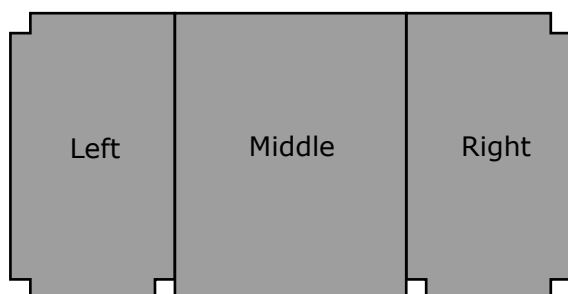

Install the carpet on the left and right sides diagonally first

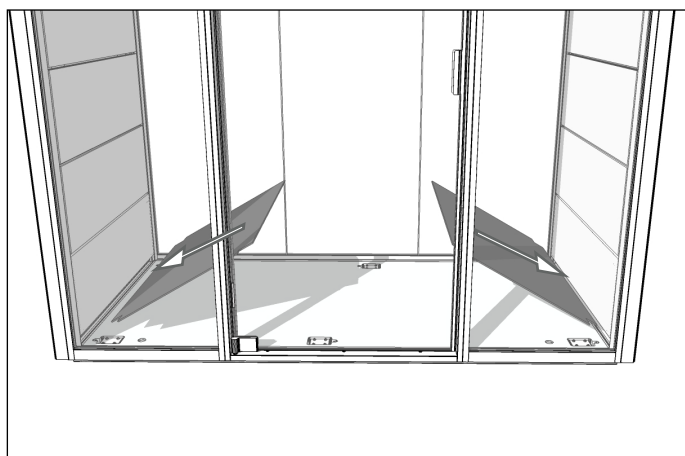

Install the middle carpet

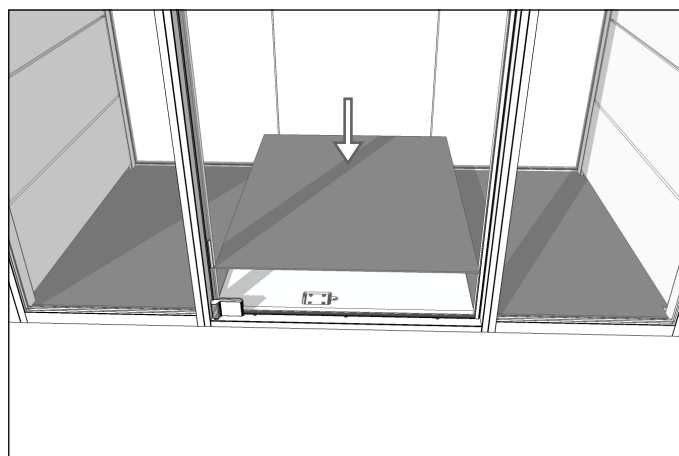

Finish

